
GENERAL NOTES

- Start all fixture row mounting from left to right.
- Depending on construction, reinforcement may be required behind walls at mounting locations.
- For power feed location, use horizontal handy box or flex conduit direct into fixture.
- For Continuos row mounting see layout of rows for dimensions.

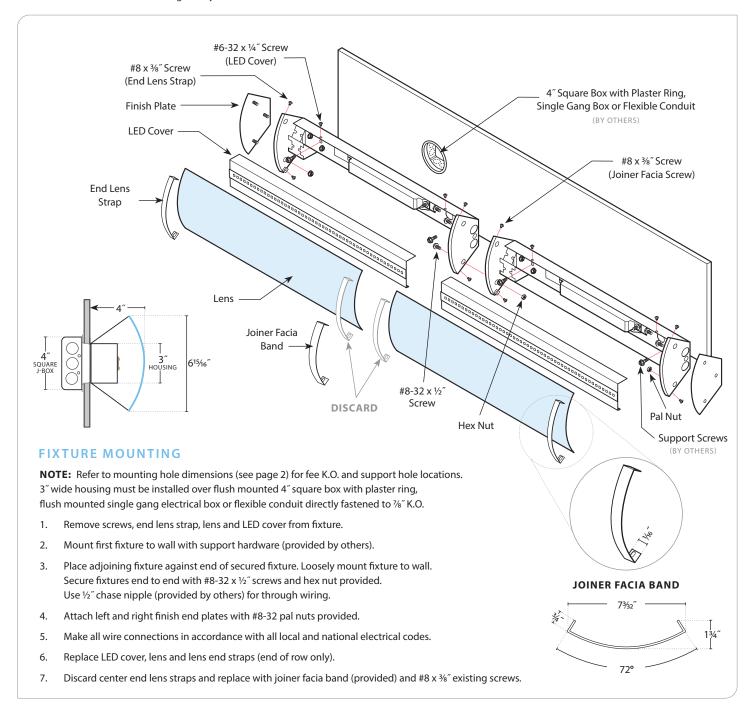

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



PRIJLITE COM 213 746 0360

MOUNTING DIMENSIONS 2 FT: 3/4 FT: 24" 36" or 48" %" Mounting Hole **⊢** 5″ 26" or 38" %"Wiring K.O. 21/2"1 - 5″ -5″ -- 5″ — ¢ Œ. • • 4 **⊢** 4⅓″− - 18" or 24" WIRING: 0-10V (+): PURPLE 0-10V (-): GREY 6/8 FT: DALI (+): PURPLE DALI (-): GREY 72" or 96" -EcoSystem DALI (+): PURPLE EcoSystem DALI (-): GREY 26" or 38" 26" or 38" HOT:BLACK ⊢ 5″ - **⊢** 5″ − ¢ NEUTRAL: WHITE ф • ф GROUND: GREEN CONSTANT HOT (EM): RED 10″ - 18" or 24" 18" or 24"