
INSTALLATION INSTRUCTIONS

PRULITE COM 213.746.0360

PRUDENTIAL LTG.

X3R (INCLUDES ROUGH-IN BOX)

MOUNTING BAR KIT

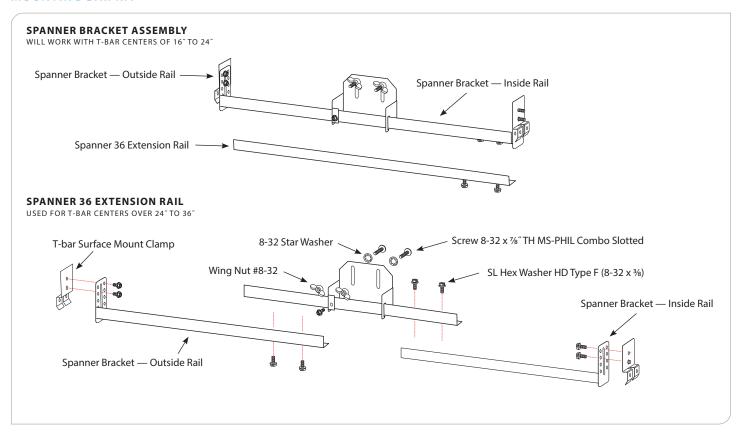

PARTS LIST

105367	SPANNER BRACKET ASSEMBLY KIT	1
104002	Spanner Bracket — Outside Rail	2
104003	Spanner Bracket — Inside Rail	2
101977	T-bar Surface Mount Clamp	4
163036	Spanner 36 Extension Rail	2
104005	Butterfly Bracket	2
100-00190-14	SL Hex Washer HD Type F (8-32 x 3/8)	18
100-00023-14	Wing Nut #8-32	4
100-00050-14	Screw 8-32 x %"TH MS-PHIL Combo Slotted	4
100-00068-14	8-32 Star Washer	4

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.



INSTALLATION INSTRUCTIONS

X3R (INCLUDES ROUGH-IN BOX)



BASIC INSTALLATION

LED DRIVER IN LED HOUSING

- Mounting bars are adjustable for joist spacing from 16"-36".
 Attach bars to rough-in box using hardware provided.
- 2. Run supply wires through knock-out on either access plate on end of rough-in box using appropriate strain relief.

LED HOUSING INSTALLATION

- Connect power and control (if included) wires from LED housing to supply wires in rough-in box.
- Rotate box spring upward to allow passage through cutout in ceiling until
 the flange is flush against the ceiling. The springs will rotate back and hold
 module in place.


EMERGENCY BATTERY INSTALLATION

EMERGENCY BATTERY AND LED DRIVER IN ROUGH-IN BOX

- Mounting bars are adjustable for ceiling joist spacing from 16"-36".
 Attach bars to rough-in box using hardware provided.
- Run supply wires through knock-out on either access plate on box using appropriate strain relief.

LED HOUSING INSTALLATION

- Connect + / DC wires from LED housing to matching wires in rough-in box.
- Rotate box spring upward to allow passage through cutout in ceiling until the flange is flush against the ceiling. The springs will rotate back and hold LED housing in place.

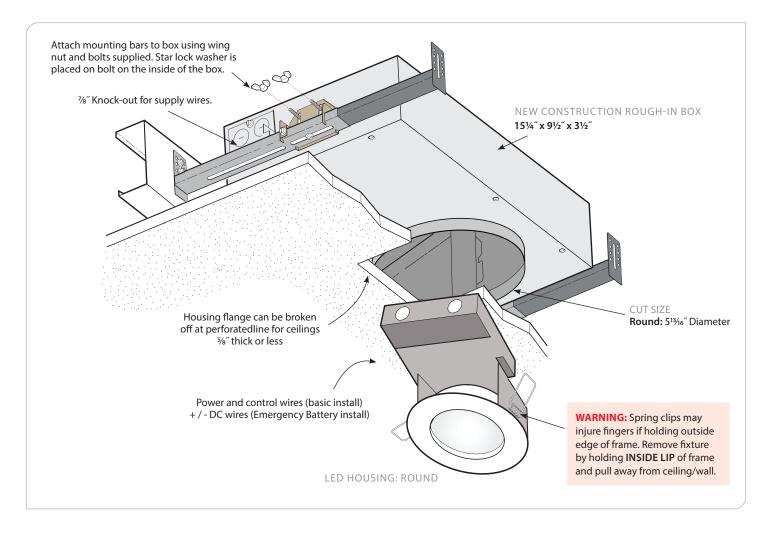

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.


Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.




DRIVER REPLACEMENT

PRULITE.COM 213.746.0360


X1 (T-BAR) & X3 (FLANGED HARD CEILING)

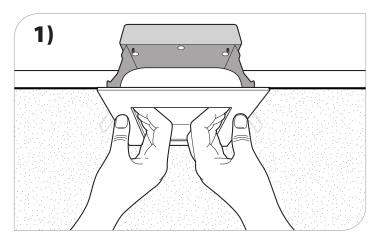

Remove fixture from ceiling by pulling from inside edge.

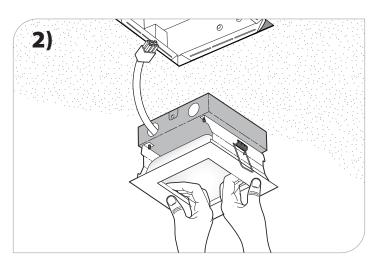


Disconnect fixture.

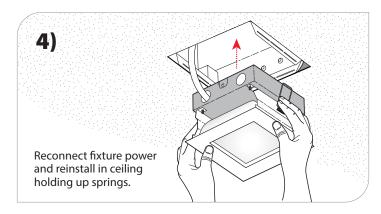



WARNING: Do **NOT** pull from outside edge — Spring clips can incur injury.

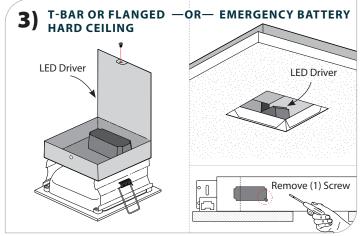

Replace driver from housing or locate in rough-in box. (AC building wire behind barrier)

Remove (1) screw holding driver in place. Disconnect and replace driver.

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.


Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.




LED REPLACEMENT

X1 (T-BAR) & X3 (FLANGED HARD CEILING)




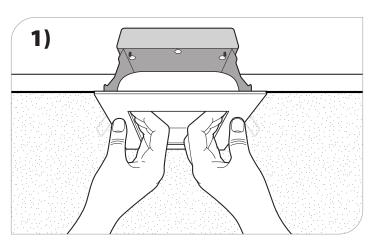

Remove fixture from ceiling by pulling from inside edge.

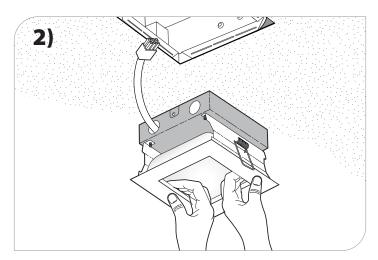


Disconnect fixture.

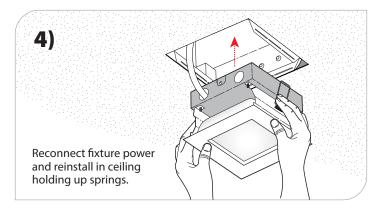

WARNING:

Do **NOT** pull from outside edge — Spring clips can incur injury.

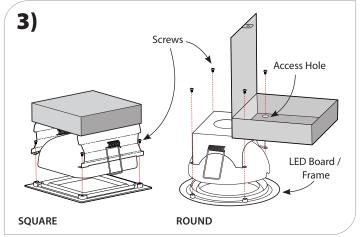

Remove (4) screws to detach trim frame. Unplug connector and remove LED board (note orientation of installed LED board). Install new LED board on trim frame and plug the connector. Attach trim frame using the same (4) screws.

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.


Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.







EMERGENCY BATTERY PACK WITH REMOTE TEST KIT (RTK)

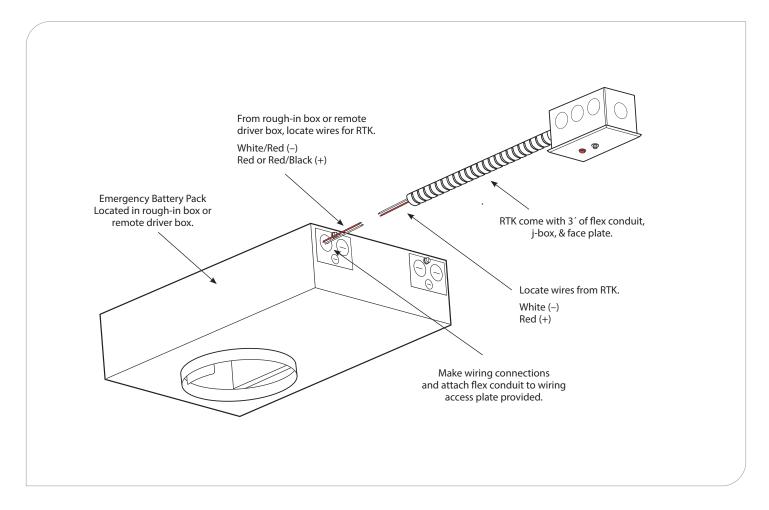

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.

