Powered Aircraft Cable

INSTALLATION INSTRUCTIONS

### X1 — T-BAR / X3 — HARD CEILING

### THE MAY REQUIRE TWO PEOPLE TO INSTALL


PART	PART NUMBER	DESCRIPTION	QTY
& Managara	100-00214-14	8-32 x ½ "Phillips Pan Type F Screw (PAC R/S ONLY)	4
C MMAR	100-00334-14	#6-32 x ⅔″ Phillips Pan Head. Type F Screw	8

#### FIXTURE WEIGHTS:


1

	18″	24″	36″
ROUND LED	17 <sub>lbs</sub>	23 <sub>lbs</sub>	44 <sub>lbs</sub>
SQUARE LED	21 <sub>lbs</sub>	28 <sub>lbs</sub>	54 <sub>lbs</sub>

#### **RPM / SPM CANOPIES (SHIPPED ASSEMBLED):**

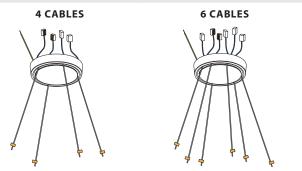


#### **DRIVER BOXES:**

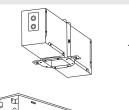

PAC R/S — Direct Canopy Mount (X3 CEILINGS ONLY)

RPAC R/S — Remote

### CADDY FAN-FIXTURE ASSEMBLY FOR X1 CEILINGS (BY OTHERS):

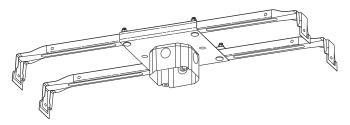







Powered Aircraft Cable


INSTALLATION INSTRUCTIONS


X1 — T-BAR / X3 — HARD CEILING

#### 🛉 🛉 MAY REQUIRE TWO PEOPLE TO INSTALL

#### **GENERAL NOTES**

- If mounting to hard ceiling, it is recommended to mount driver box before drywall is installed.
- If drywall is already installed, or if install is a remodel, a large enough opening will need to be cut in ceiling to mount driver box to structure according to your installation type (See mounting options A, B, C or D).
- Mounting options A, B and C are to be installed in hard ceiling only.
- Mounting option D is to be installed in t-bar ceiling.

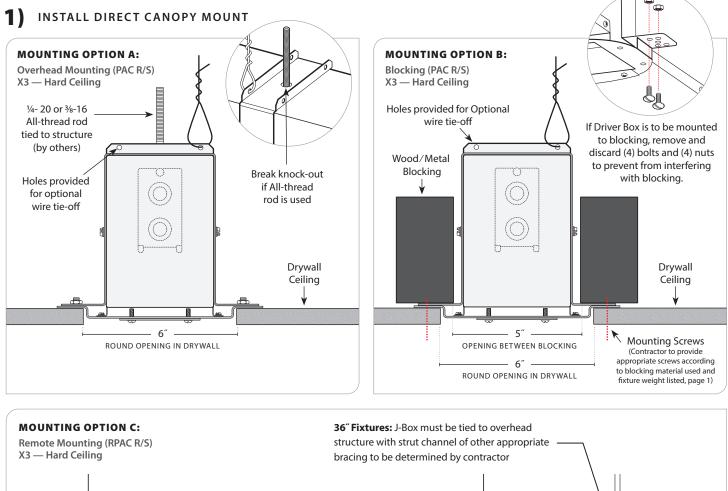

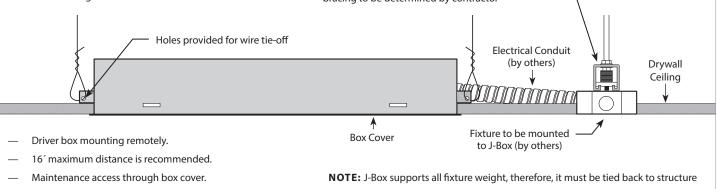

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.

Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data. © 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058






Powered Aircraft Cable

INSTALLATION INSTRUCTIONS


### X1 — T-BAR / X3 — HARD CEILING

### THE MAY REQUIRE TWO PEOPLE TO INSTALL



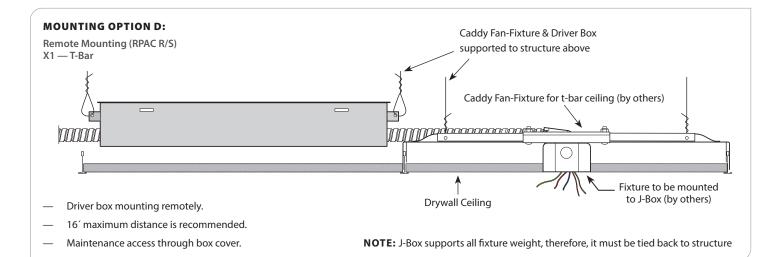

## 2a) MAKE WIRING CONNECTIONS TO DRIVER BOX

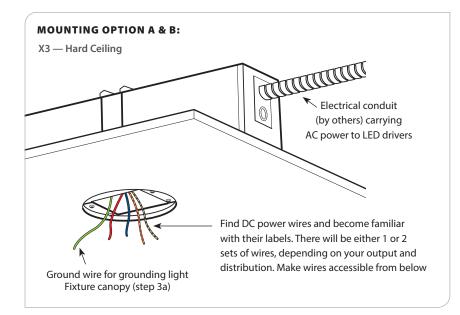

но	T:BLACK	
	UTRAL : WHITE	
GR	OUND : GREEN	
0	NSTANT HOT (EM) : R	ED
ос ро	WER WIRES (LC	OW VOLTAGE):
		• • •
abel	Color RED	DW VOLTAGE): Description DIRECT LIGHT DRIVER 1 POSITIVE +
abel DIR 1 +	Color	Description
abel DIR 1 + DIR 1 –	Color RED	Description DIRECT LIGHT DRIVER 1 POSITIVE +
DC PO Label DIR 1 + DIR 1 - DIR 2 + DIR 2 -	Color RED BLUE	Description DIRECT LIGHT DRIVER 1 POSITIVE + DIRECT LIGHT DRIVER 1 NEGATIVE -
Label DIR 1 + DIR 1 - DIR 2 +	Color RED BLUE YELLOW/RED	Description DIRECT LIGHT DRIVER 1 POSITIVE + DIRECT LIGHT DRIVER 1 NEGATIVE + DIRECT LIGHT DRIVER 2 POSITIVE +





Powered Aircraft Cable


INSTALLATION INSTRUCTIONS


### X1 — T-BAR / X3 — HARD CEILING



#### MOUNTING OPTION C & D:

- Route all DC power wires to J-Box located where light fixture is to be mounted.
- Some light fixtures may require multiple driver boxes. There will be a total of 1, 2, or 3 sets of wires depending on your output and distribution.
- 72<sup>°</sup> of wire will be provided. If remote distance is more than 72<sup>°</sup>, additional wire will need to be provided by others.
   Wire labels will need to be duplicated at J-box.

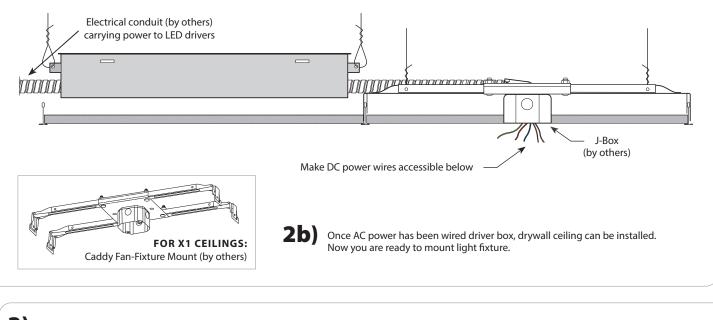

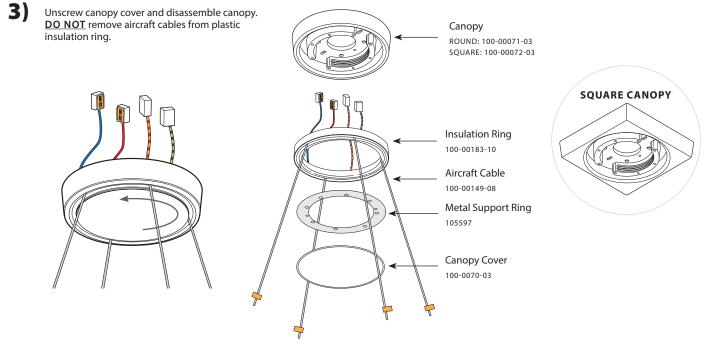








Powered Aircraft Cable

INSTALLATION INSTRUCTIONS


X1 — T-BAR / X3 — HARD CEILING

### THE MAY REQUIRE TWO PEOPLE TO INSTALL



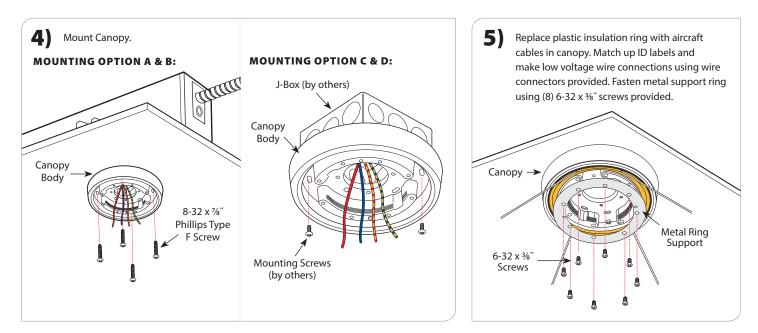

#### THE REMAINING STEPS TO BE USED REGARDLESS OF WHICH MOUNTING OPTION IS USED

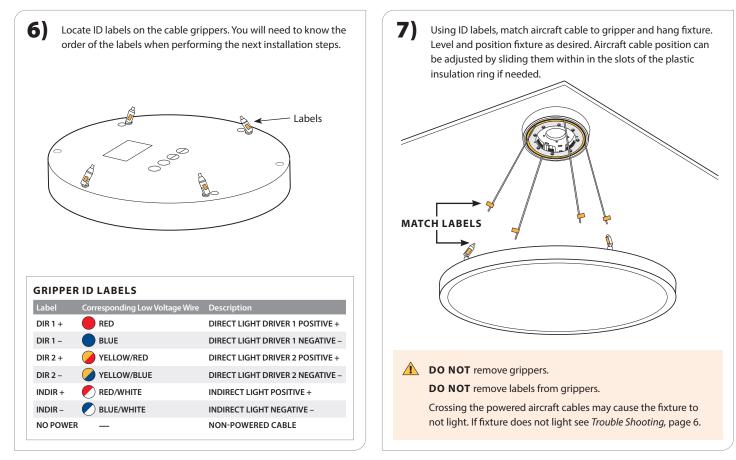






Powered Aircraft Cable


INSTALLATION INSTRUCTIONS

X1 — T-BAR / X3 — HARD CEILING

## 前前 MAY REQUIRE TWO PEOPLE TO INSTALL



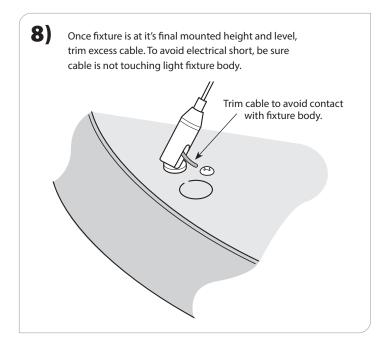

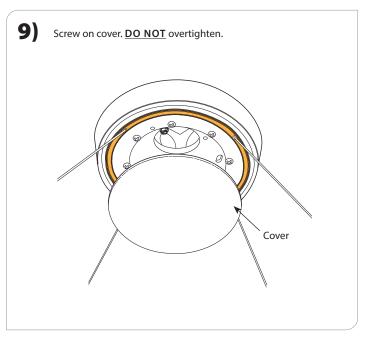





INSTALLATION INSTRUCTIONS

TROUBLE SHOOTING



#### **IF LIGHT FIXTURE DOES NOT LIGHT UP**

- Check aircraft cable is not making contact with any metal besides cable gripper (step 8).
- With fixture powered on, use multimeter to check each set of powered aircraft cables.
   Ensure you are checking a matching pair, i.e, "DIR 1+ and DIR 1-". You should get a voltage reading of 31 35 volts.
   If you get a voltage reading higher or lower than this, you may have a poor connection somewhere.
- With fixture power on, use multimeter to check line voltage power to LED drivers.
- If the fixture still does not light up, contact the factory for further troubleshooting.

