

PRIII ITE COM 213 746 0360


NOTES

- See row diagram or Prudential Ltg. plan layout (if provided). Begin all row mounting from left to right (See arrows).
- Depending upon ceiling or wall construction reinforcement may be required at mounting locations.
- FOR CONTINUOS ROW Install one fixture section at a time.


WALL MOUNTING

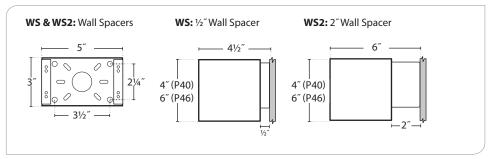


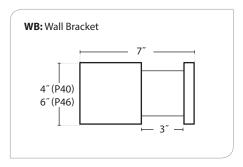


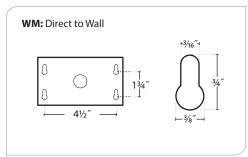

WALL BRACKET (WB)

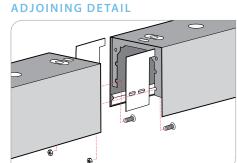


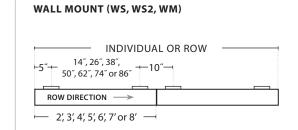









FIXTURE WALL MOUNTING

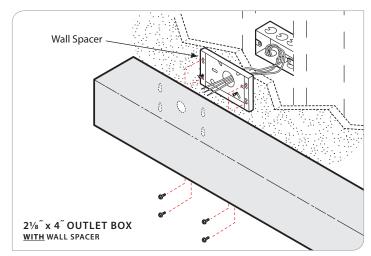

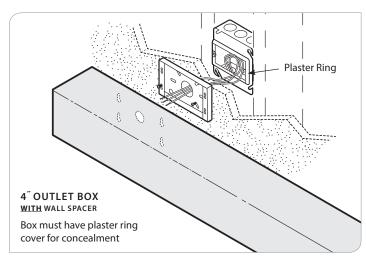

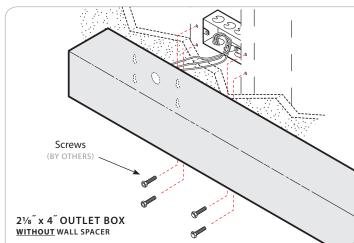


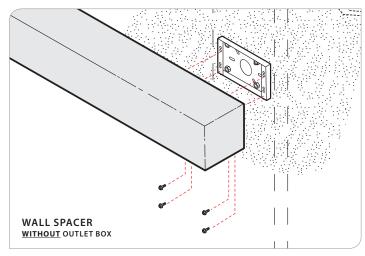

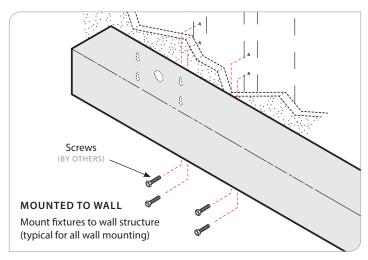

P40 WALL SPACER (WS)INSTALLATION


- 1. Remove lens and reflector.
- 2. Install (4x) $\#8 \times \%$ hex washer head screws to wall spacer.
- 3. Mount wall spacer to j-box (by others) or structure surface at required locations (see layout).
- 4. Lift fixture, feed wires into fixture and slide screw heads through keyslot and secure.
- 5. Make all necessary wire connections reinstall reflector and lens.
- 6. Repeat steps 1-5 for continuos rows and install finish plates.

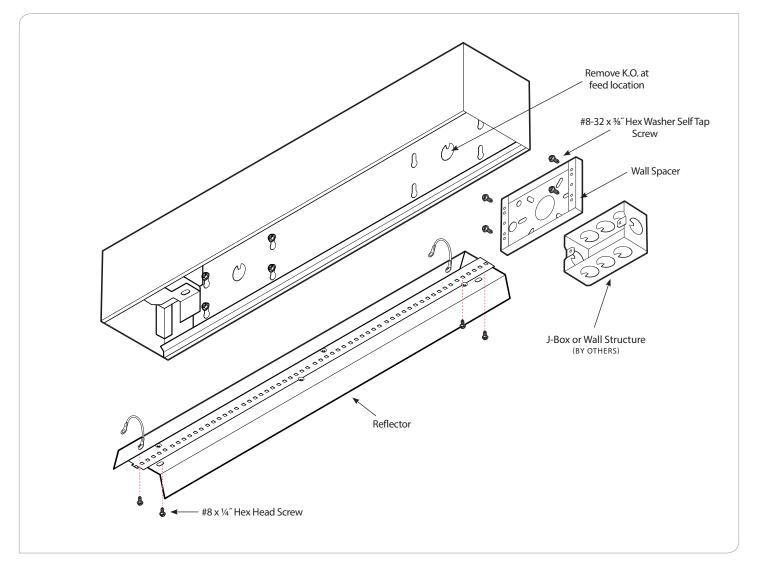



INSTALLATION

- 1. Remove lens and reflector.
- 2. From mounting kit (provided), install canopy, wall bracket arm assembly to fixture, secure with (2x) #8 x 1" head screw.
- 3. Mount wall plate to j-box (by others) or to structure surface at required locations (see layout).
- 4. Lift fixture, feed wires into fixture and slide onto wall plate and secure with (2x) #6-32 x ¼″ screws. Slide canopy back till it hits wall.
- 5. Make all necessary wire connections reinstall reflector and lens.
- 6. Repeat steps 1-5 for row condition and install finish plates.

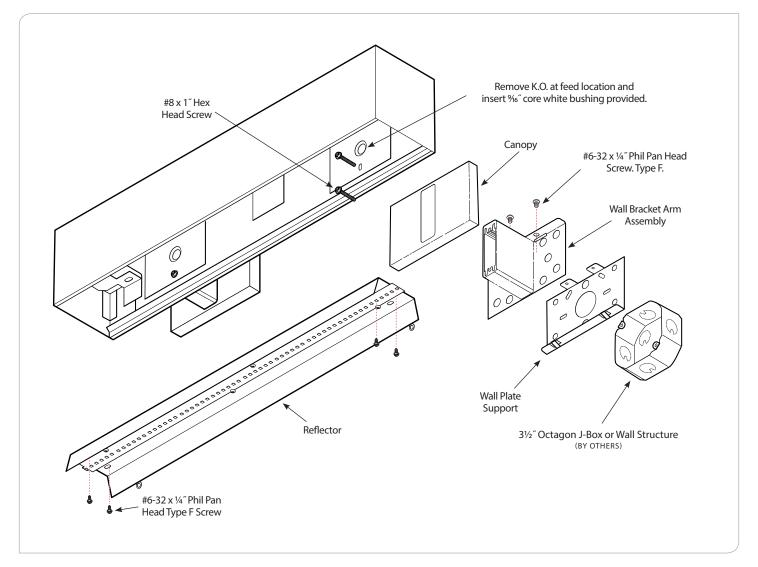




LENS CONFIGURATION



WALL GRAZE

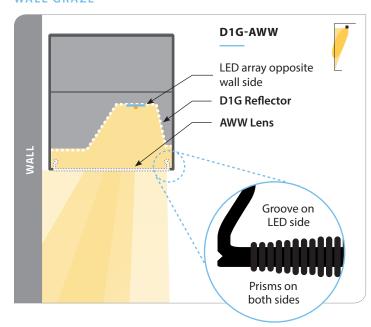

WALL WASH

