



P43 | Recessed Linear 4" Slot









INSTALLATION INSTRUCTIONS

X3B (HARD CEILING)









PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

PARTS LIST (SHIPPED SEPARATELY)	PART NO.	DESCRIPTION
	77029	Flush — X3
	100-00190-14	#8-32 x 3/8" SL HWH Type F Screw
	100-00148-14	#10 x 3/16" HWH Screw
	100-00286-14	#6-32 x 3/16" Phil PH Type 23 Screw
	See Order	Lens
	73321	Housing Aligner Spline
	82484	Lens Removal Tool
	29513	Aligner / Seam Joiner

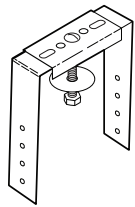MOUNTING BRACKET:

		100-00126-14	1/4-20 Fender Washer
		100-00165-14	1/4-20 Hex Nut
		23161	Bracket Leg 5 3/4"
		134810	Overhead Mounting Bracket Yoke with Nut
		100-00005-14	1/4-20 x 3/8" Round Head Machine Screw

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS

X3B (HARD CEILING)




PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

- Additional support to structural member may be required. Check with local building codes for requirement.
- Wall to Wall Fixtures must terminate at wall (no end trims).
- Individual fixtures not intended for row mounting.
- Install fixture and seam hardware prior to drywall installation.


CROSS SECTION:

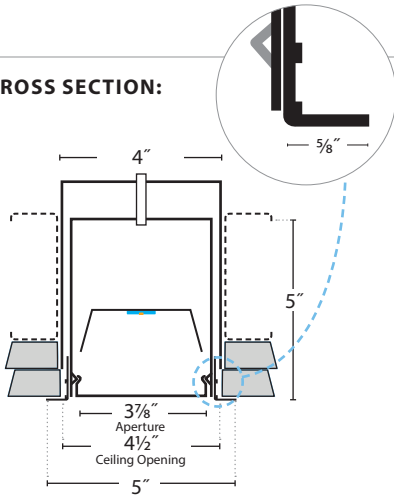

ROUGH-IN DIMENSIONS:

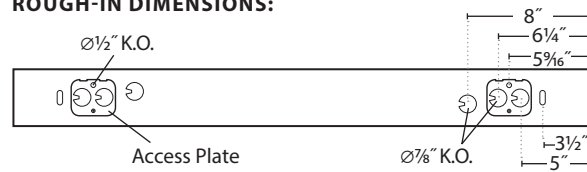


LOUVER SAFETY:

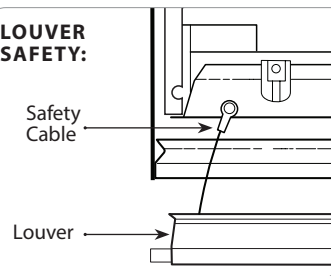


LIGHT POCKET INDIVIDUAL:

-----> ROW DIRECTION: INSTALL FROM LEFT TO RIGHT

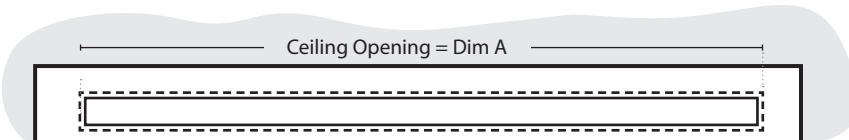


FIXTURE	DIM 'A'
24"	24 3/8"
36"	36 3/8"
48"	48 3/8"
72"	72 3/8"
96"	96 3/8"

LIGHT POCKET:

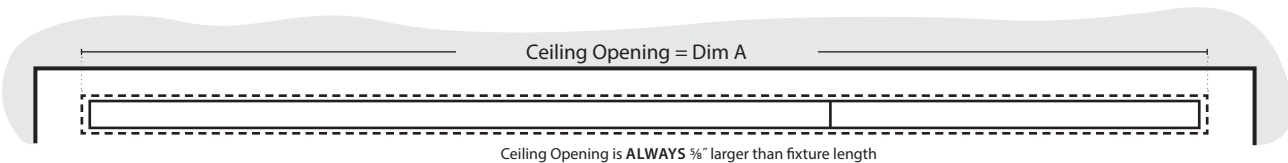

WALL TO WALL:

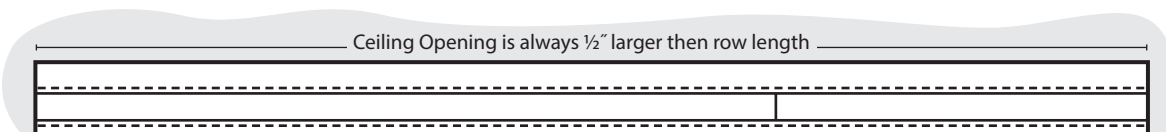

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS


X3B (HARD CEILING)



PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

IDENTIFYING FIXTURES

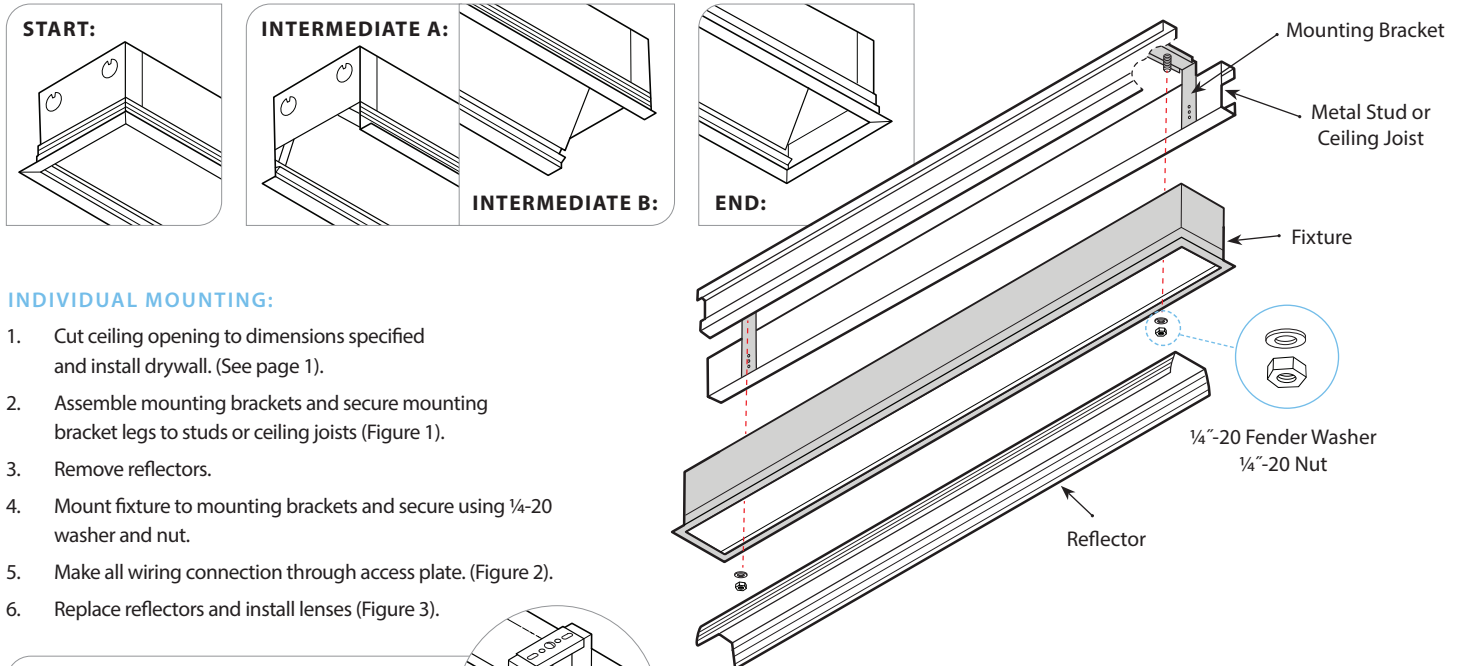


INDIVIDUAL MOUNTING:

1. Cut ceiling opening to dimensions specified and install drywall. (See page 1).
2. Assemble mounting brackets and secure mounting bracket legs to studs or ceiling joists (Figure 1).
3. Remove reflectors.
4. Mount fixture to mounting brackets and secure using 1/4"-20 washer and nut.
5. Make all wiring connection through access plate. (Figure 2).
6. Replace reflectors and install lenses (Figure 3).

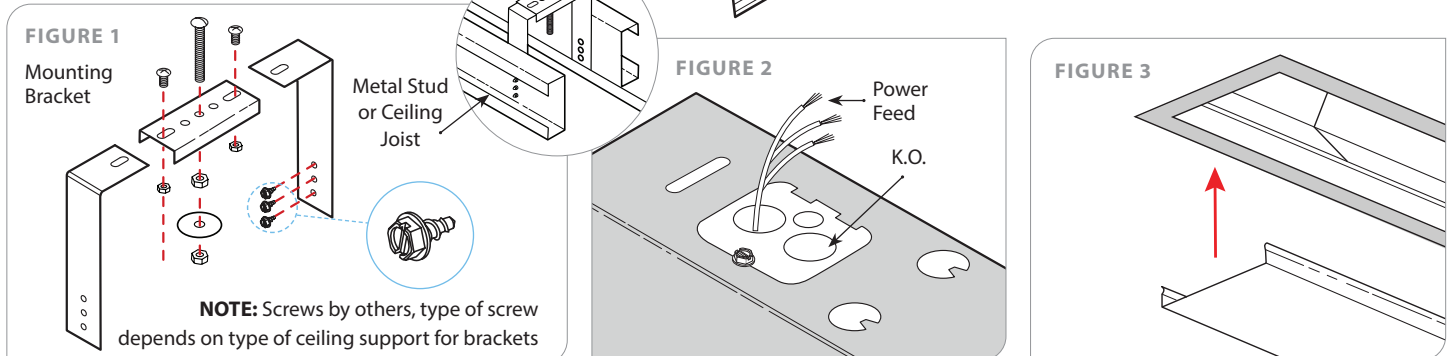

ROW MOUNTING:

1. Install (2x) housing aligner splines per seam and secure to housing using #8-32 x 3/8" HHWSL Screw. (Figure A1 & A2).
2. Slide (2x) aligner/ seam joiners into trim at the seam and secure to trim using #6-32 x 3/16" PHP Type 23 screw (Figure B).
3. Install finish plates at start and end of row and secure to housing using (2) #10 x 3/16" HWH screws (Figure C).
4. Refer to filler kit instructions to field trim filler kits (where used).
5. Last lens in row to be field trimmed to size. (Figure 3).

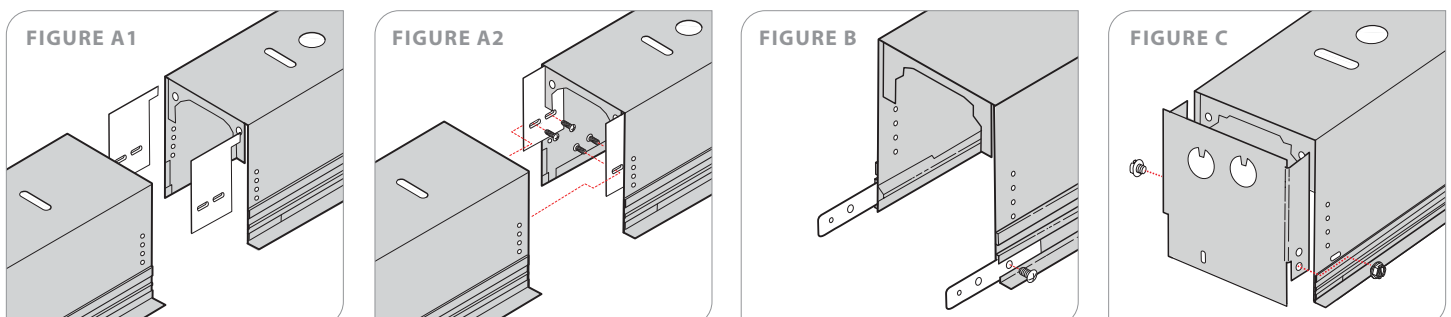

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved - All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS


FILLER KIT




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

TOOLS REQUIRED



Power Shears



Grinder




Tin Snips


INSTALLATION:

1. Determine **FILLER** location & measure length of filler needed (Mark cut line around housing).


WALL TO WALL

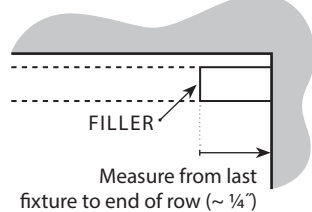


LIGHT POCKET

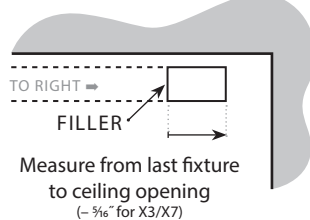


PATTERN

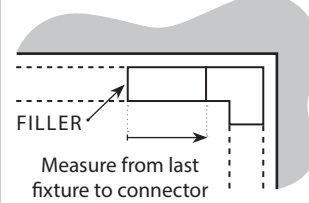

Reg 3" Filler

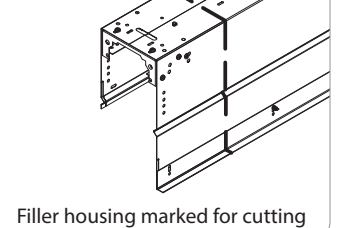

2. Disassemble **FILLER** Kit & Remove Reflector from previous row.

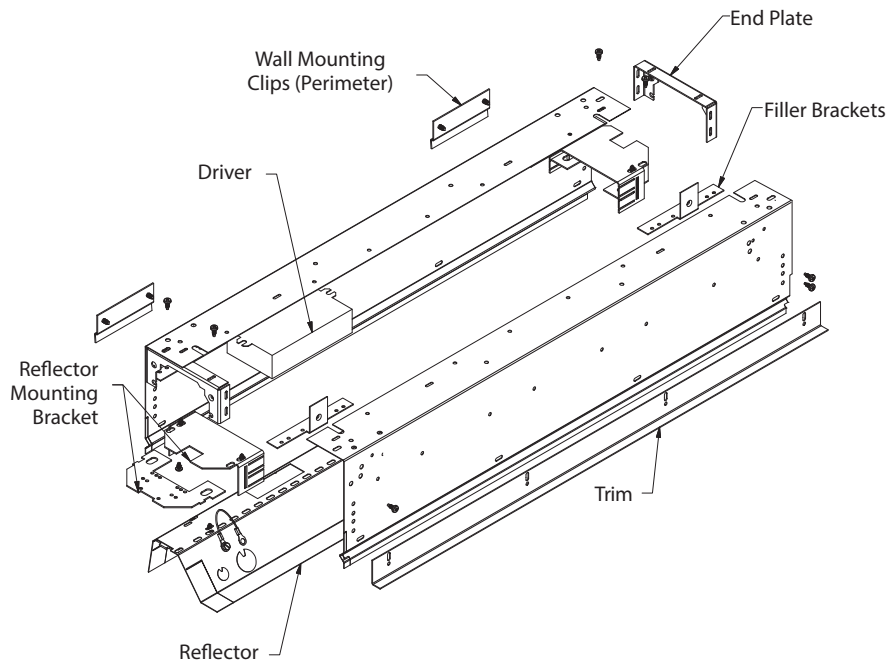

FLUSH SHOWN, SAME STEPS FOR REG 3"

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS



FILLER KIT




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360


3. Measure Trim and Mark for Cutting

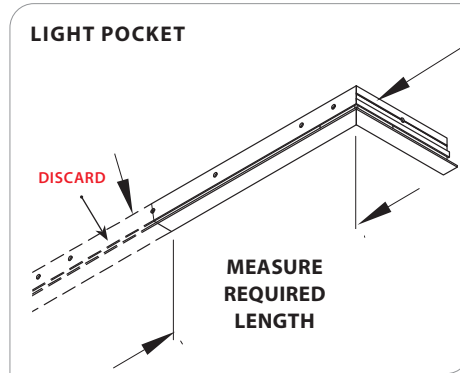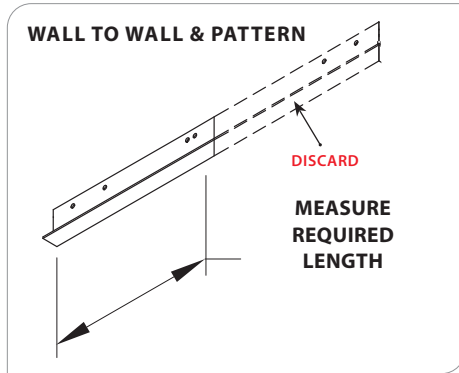

4. Cut and discard Filler Housing

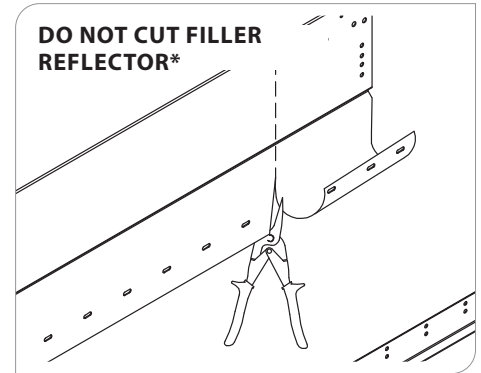


5. Assemble Filler Kit with Driver & Trim (Do Not install Reflector with LED arrays).

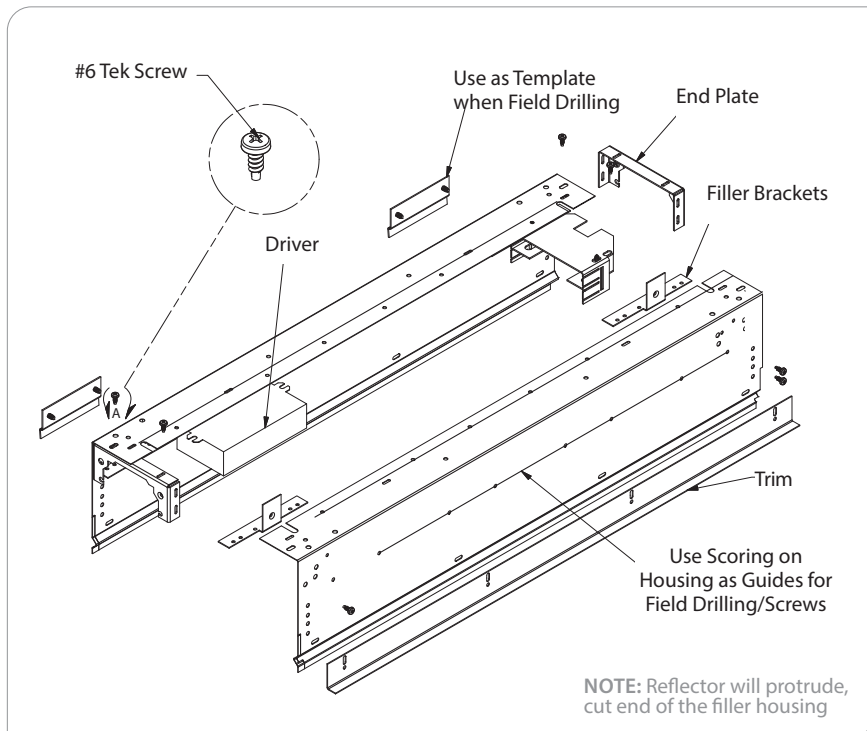

* FOR SPECIAL SITUATIONS, THE 2' FILLER REFLECTOR MAY BE PROVIDED WITH LESS THAN 2' OF LED BOARD. IN THIS CASE, TRIM THE REFLECTOR TO THE LED BOARD — **THIS WILL NOT APPLY TO MOST INSTALLATIONS**

6. Install filler into ceiling & connect wiring.

7. Install spacer on reflector in previous housing.

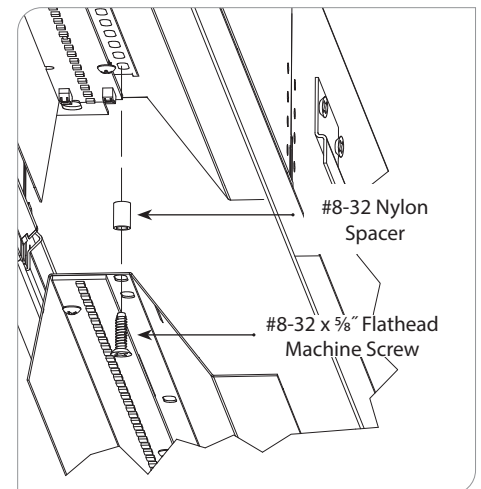

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS


FILLER KIT




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

7. Install filler reflector 'above' previous housing reflector.


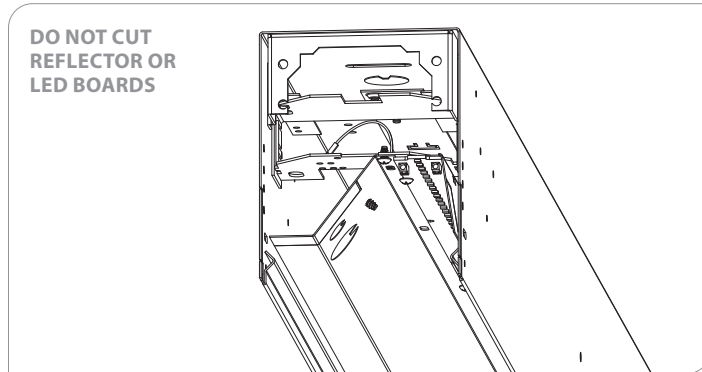


9. Screw reflector into last bracket of previous housing.

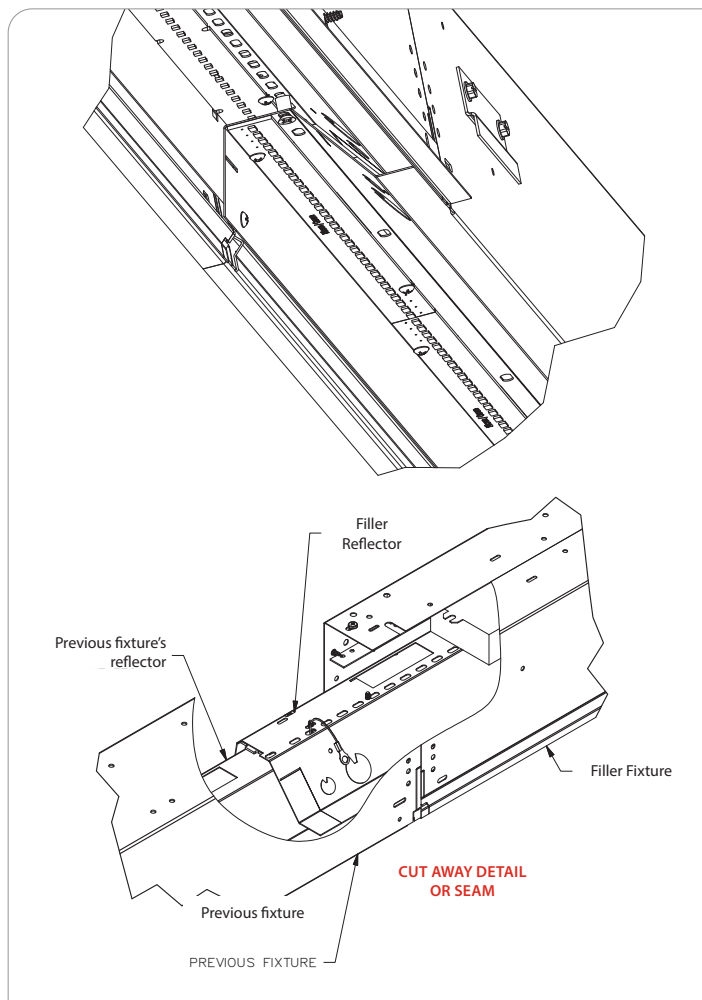


11. Complete wiring and install lens.

8. Slide reflector mounting plate OUT and UP one spot to secure reflector to previous housing.

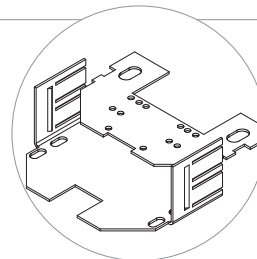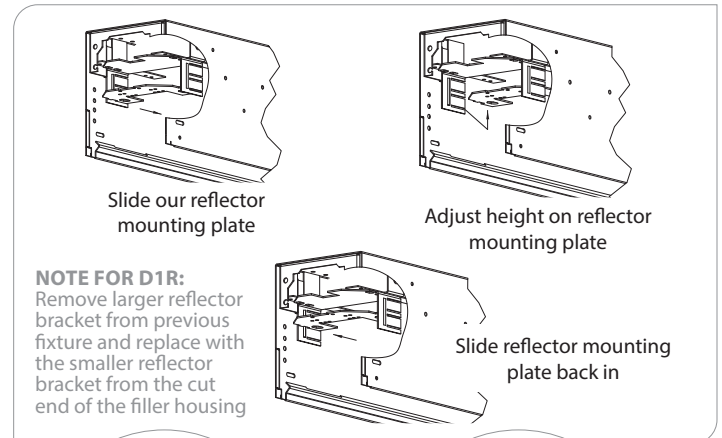

D1/D1G
Reflector Mounting Plate

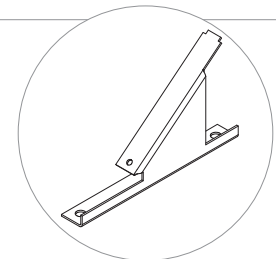

D1R
Reflector Mounting Bracket

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058