



P43 | Recessed Linear 4" Slot










INSTALLATION INSTRUCTIONS

X1, X1M, X2, X6 — T-BAR



PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

PARTS LIST	PART NO.	DESCRIPTION
FINISH PLATES:		
	76917	Flush — X1/X1M
	88671	Flush — X2/X6
	77029	Wall to Wall (WTW)
	100-00190-14	#8-32 x 3/8" SL HWH Type F Screw
	100-00148-14	#10 x 3/16" HWH Screw
	See Order	Lens
	100-00084-08	Troffer Clamp
	73321	Housing Aligner Spline
	82484	Lens Removal Tool

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS

X1, X2, X6 — T-BAR




PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

- Additional support to structural member may be required. Check with local building codes for requirement.
- Wall to Wall Fixtures must terminate at wall (no end trims).
- Individual fixtures not intended for row mounting.


CROSS SECTION:

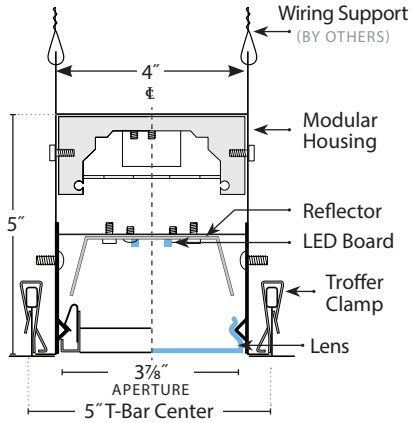

ROUGH-IN DIMENSIONS:

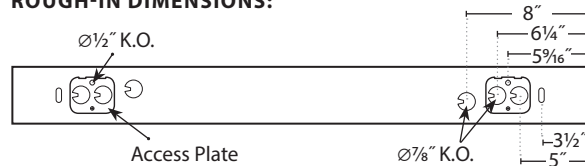


X2/X6 T-BAR:

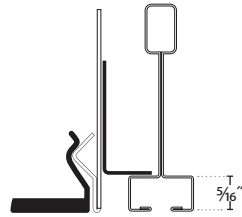

LOUVER SAFETY:

Safety Cable

Louver

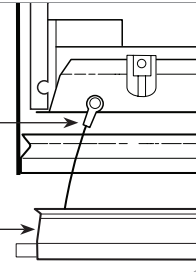

LIGHT POCKET INDIVIDUAL:



ROW DIRECTION: INSTALL FROM LEFT TO RIGHT


INDIVIDUAL FIXTURES

T-BAR CENTERS


DIM 'A'

24"
36"
48"
72"
96"

LIGHT POCKET:

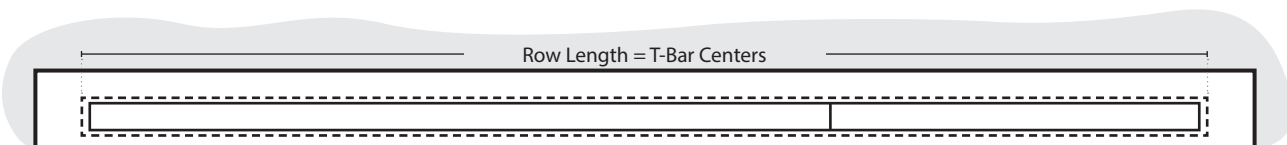

WALL TO WALL:

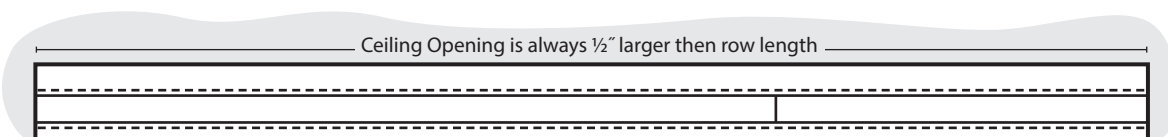

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS

X1, X2, X6 — T-BAR




PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

INDIVIDUAL MOUNTING:


1. Install troffer clamp 6" from end of housing (4 per housing) (Figure 1).
2. Lift fixture above grid & lower down until troffer clamps snap onto grid (Figure 2 & 3).
3. Make all wiring connections through access plate. (Figure 4).
4. Install lens (Figure 5).

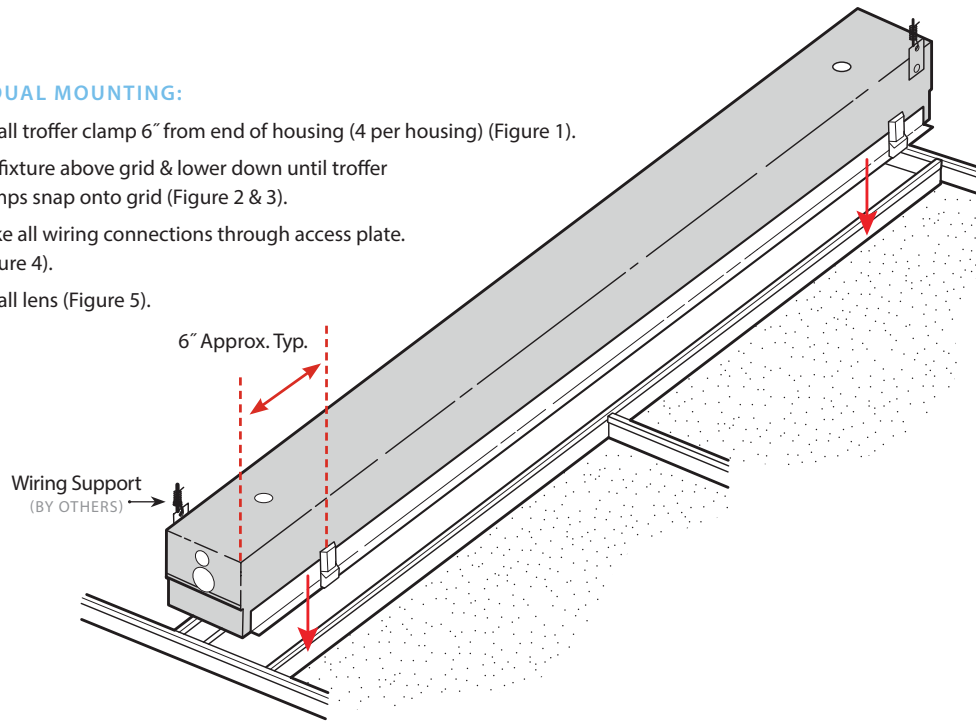

IDENTIFYING FIXTURES:

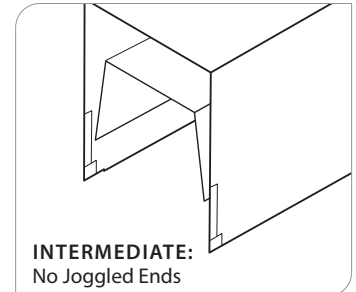

INTERMEDIATE:
No Joggled Ends

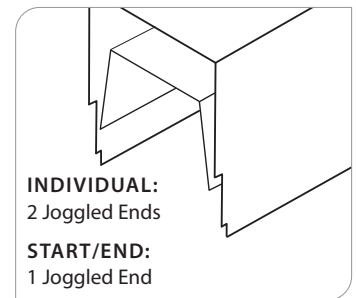

INDIVIDUAL:
2 Joggled Ends

START/END:
1 Joggled End

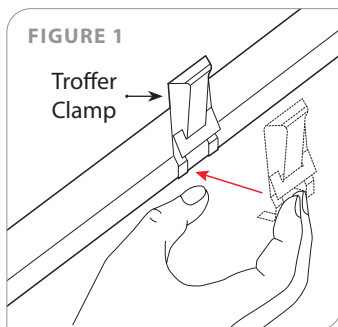


FIGURE 1

Troffer Clamp

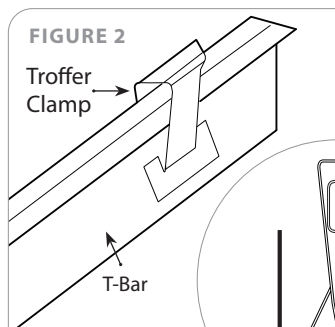


FIGURE 2

Troffer Clamp

T-Bar

Troffer Clamp
T-Bar

FIGURE 3

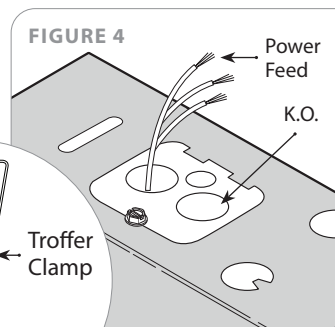


FIGURE 4

Power Feed

K.O.

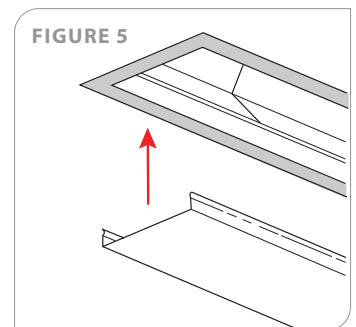


FIGURE 5

ROW MOUNTING:

1. Install (2) housing aligner splines per seam and secure to housing with #8-32 x 3/8" HHWSL Screw (Figures A1 & A2).
2. Install finish plates at start and end of row and secure to housing using #10 x 3/16" HWH screws (2 per finish plate) (Figure B).
3. Refer to filler kit installation to field trim filler kits (where used).
4. Install lenses for length of row. Last lens to be cut to size. (Figure C).

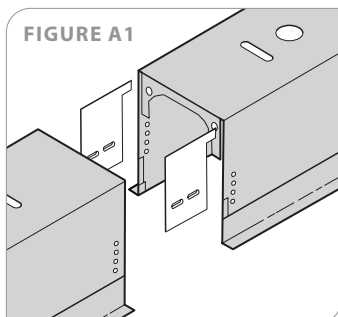


FIGURE A1

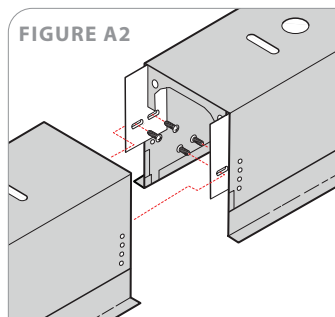


FIGURE A2

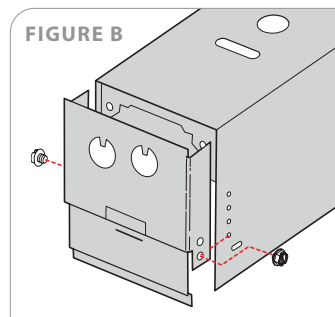


FIGURE B

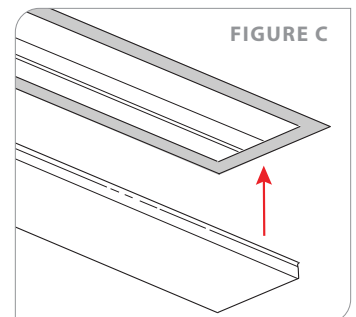


FIGURE C

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS


FILLER KIT




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

TOOLS REQUIRED



Power Shears



Grinder




Tin Snips


INSTALLATION:

1. Determine **FILLER** location & measure length of filler needed (Mark cut line around housing).


WALL TO WALL

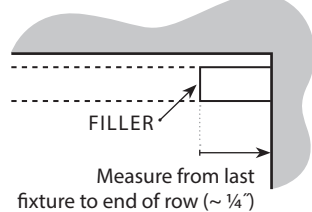


LIGHT POCKET

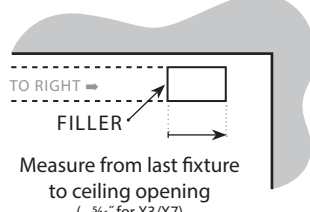

PATTERN

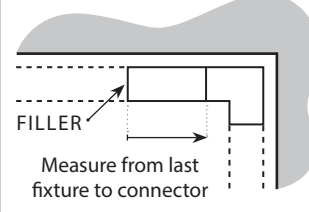


Reg 3" Filler

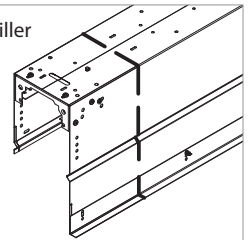

Filler housing marked for cutting

2. Disassemble **FILLER** Kit & Remove Reflector from previous row.

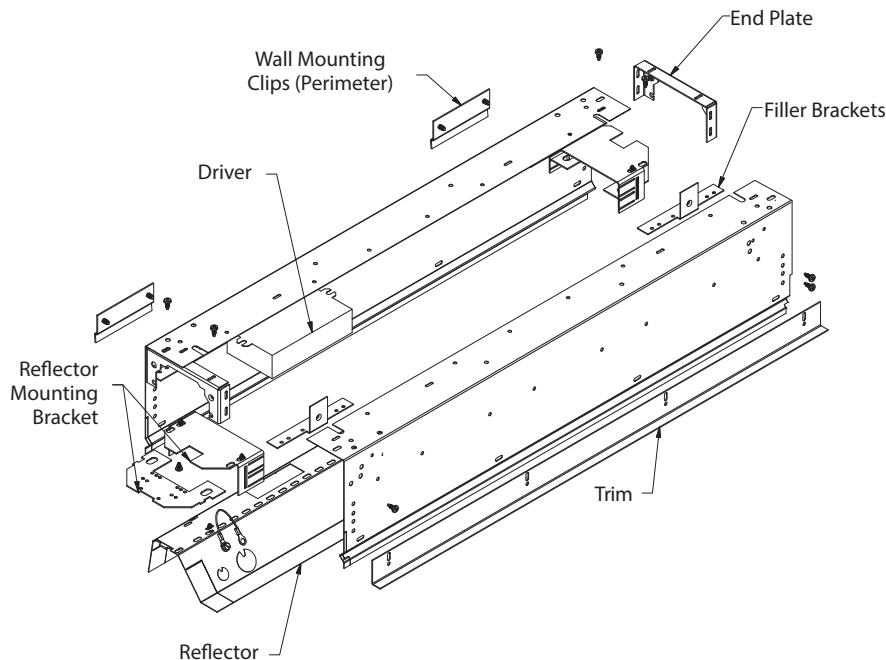

FLUSH SHOWN, SAME STEPS FOR REG 3"

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS



FILLER KIT




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360


3. Measure Trim and Mark for Cutting

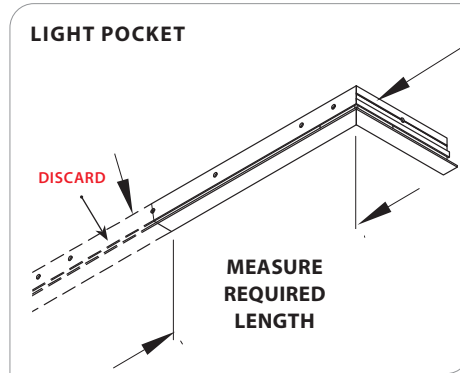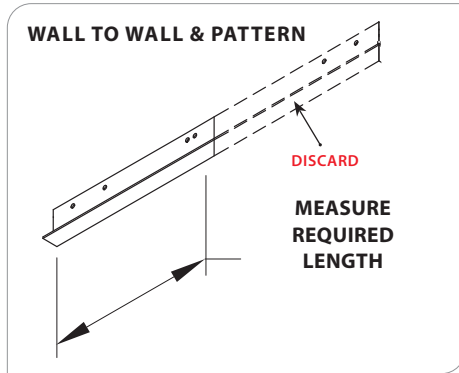

4. Cut and discard Filler Housing

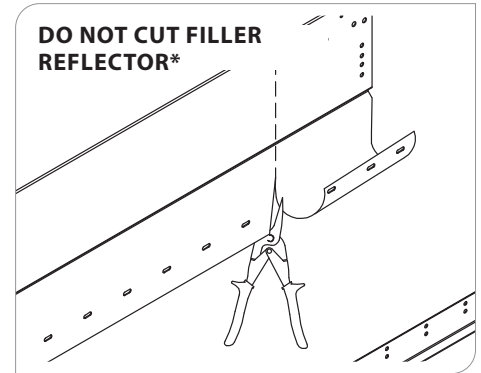


5. Assemble Filler Kit with Driver & Trim (Do Not install Reflector with LED arrays).

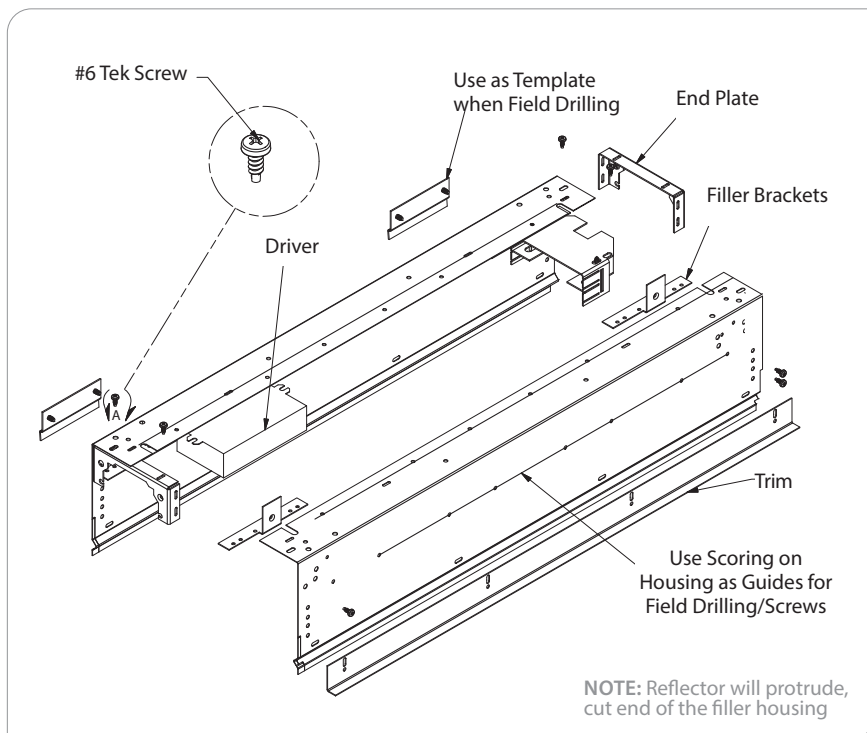

* FOR SPECIAL SITUATIONS, THE 2' FILLER REFLECTOR MAY BE PROVIDED WITH LESS THAN 2' OF LED BOARD. IN THIS CASE, TRIM THE REFLECTOR TO THE LED BOARD — **THIS WILL NOT APPLY TO MOST INSTALLATIONS**

6. Install filler into ceiling & connect wiring.

7. Install spacer on reflector in previous housing.

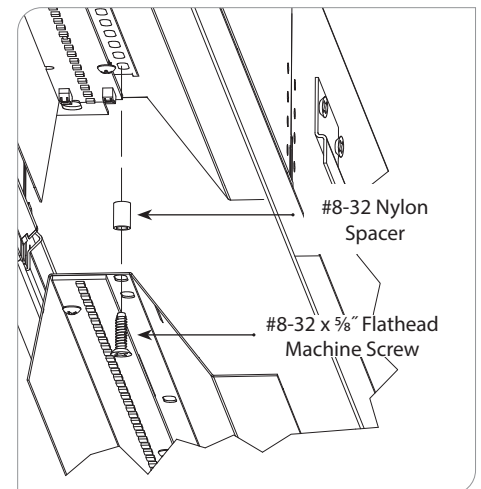

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P43 | Recessed Linear 4" Slot

INSTALLATION INSTRUCTIONS


FILLER KIT




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

8. Install filler reflector 'above' previous housing reflector.


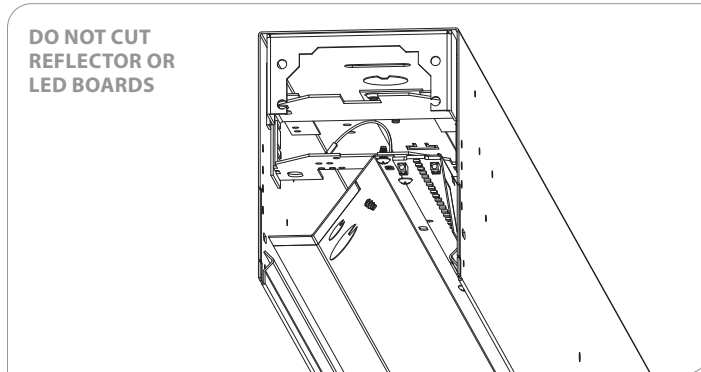


10. Screw reflector into last bracket of previous housing.

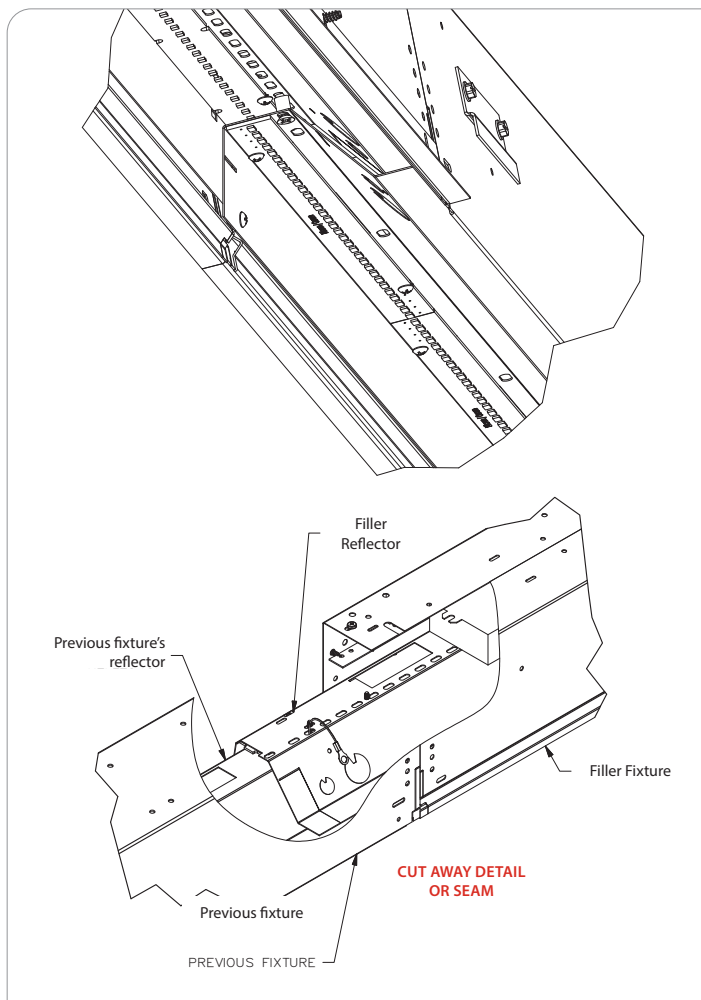


11. Complete wiring and install lens.

9. Slide reflector mounting plate OUT and UP one spot to secure reflector to previous housing.

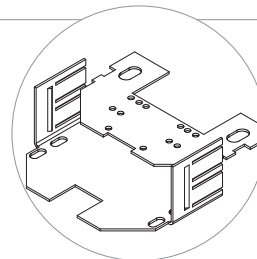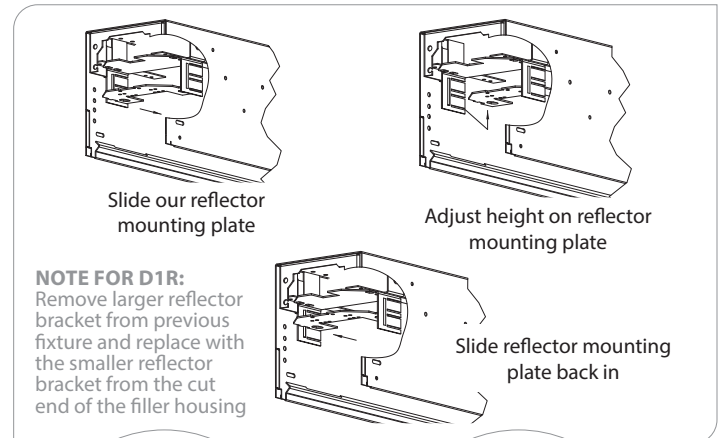

D1/D1G
Reflector Mounting Plate

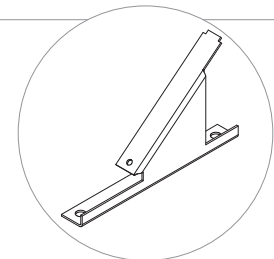

D1R
Reflector Mounting Bracket

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058