



## INSTALLATION INSTRUCTIONS

PRULITE.COM 213.746.0360

### MOUNTING

1. Screw cable grippers into corner holes until they bottom out.
2. Follow separate cable mounting instruction for ceiling.
3. Wire fixture accordingly.

### INSTALLING CORNERS





#### ZENITH OUT/ UP/ DOWN

1. Remove lens and covers from both adjacent sides. (See removing corners).
2. Align corner holes to corner bracket holes and secure with (2x) screw

#### ZENITH IN

1. Remove corner by sliding out. (See removing corners).

**NOTE:** Corner lens aligned used to close gap a lens seams.

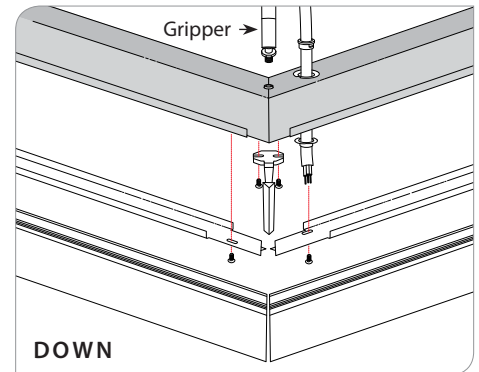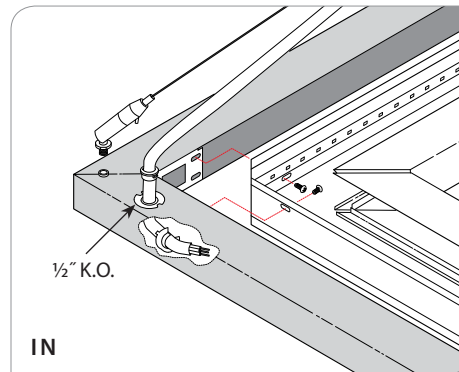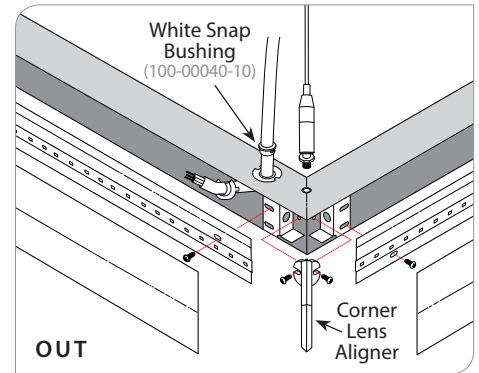
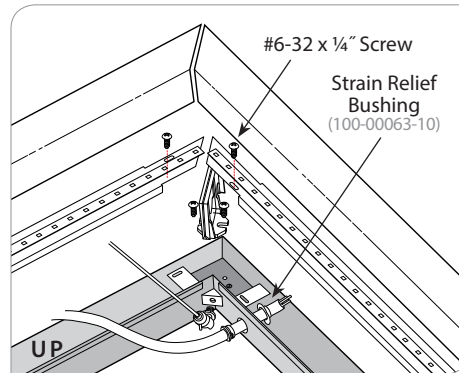


**NOTE:** 1/2" Diameter K.O. is standard 3 & 4 wire cord. Use 3/8" diameter with universal bushing when 5 or 6 wire cord is required.

### REMOVING COVERS

To remove covers to service LED boards or drivers.

1. Unsnap lens section.
2. Unscrew 2x screws holding cover down.

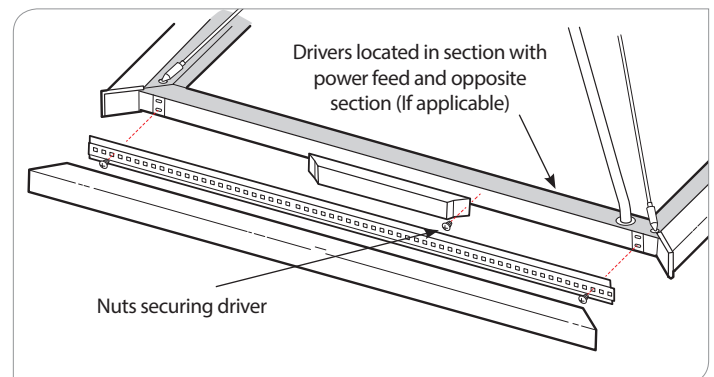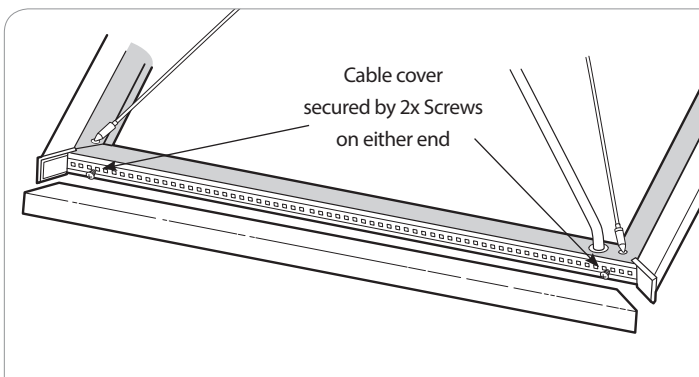

**WARNING:** Ground fixture in according with local and national electrical codes. Failure to do so may result in serious personal injury.

