



P23 | Recessed Linear

2" Slot

INSTALLATION INSTRUCTIONS

X1, X2, X6 (T-BAR)



PRUDENTIAL LTG.

PRULITE.COM 213.746.0360


PARTS LIST

PART NO.

DESCRIPTION

FINISH PLATES:

X1

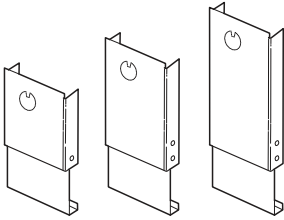

91450

Flush


91451

Regress 1

91452

Regress 3

X2 + X6

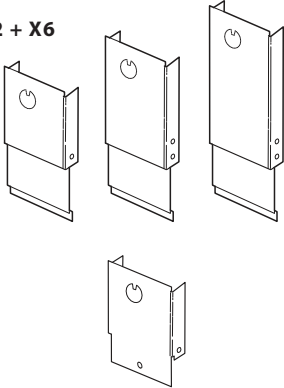

91453

Flush

91454


Regress 1

91455

Regress 3


91459

Wall to Wall (WTW)




29513

Aligner Spline




101504

Body Joiner



100-00084-08 Troffer Clamp



101274

Reflector Removal Tool

PARTS LIST


PART NO.

DESCRIPTION




82484

Lens Removal Tool

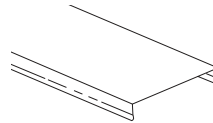


—

Lens

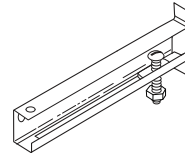

100638

Perimeter Mounting Bracket

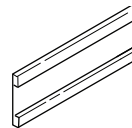

100-00090-02

Wall Rail Extrusion



100-00086-14

#6 x 3/8" Phil Pan Tek Screw



100-00286-14

#6-32 x 3/16" Sheet Metal Screw



100-00019-14

#8 x 1/4" HWH SMS Phil Screw



100-00273-14

7/64" x 1" Aligner Pin

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear 2" Slot


INSTALLATION INSTRUCTIONS

X1, X2, X6 (T-BAR)


1. Place troffer clamp approximately 6" from housing end (See figure 1). Use 4 clamps per housing.
2. Lift housing above t-bar grid and lower it down until troffer clamps snap onto grid. (See figures 2 & 3).
3. Make all wire connections through access plates.

NOTES:

- Additional support to structural member may be required.
- Check with local building codes for requirement.
- Install finish plates at start and end of rows.

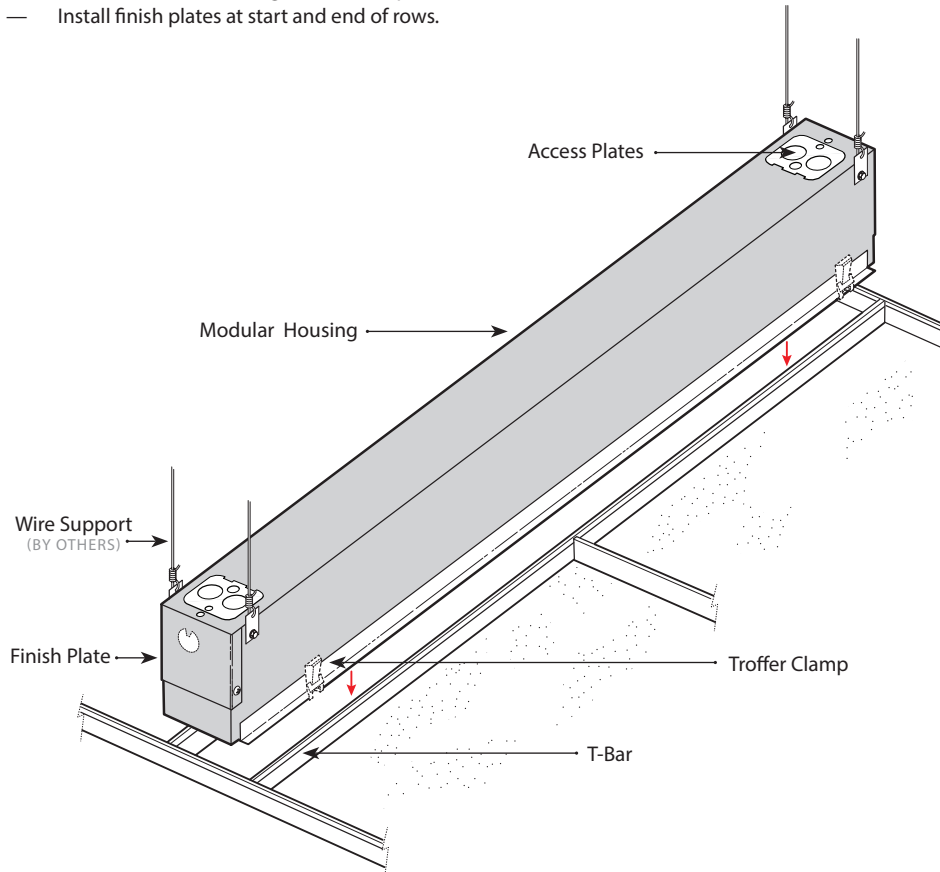

HOUSING CROSS SECTION

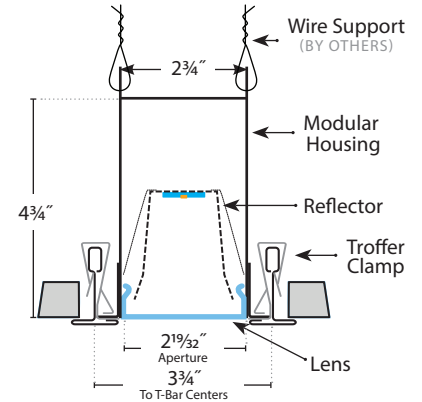

FOR JOINING AND REFLECTOR DETAILS SEE PAGE 3.

FIGURE 1:

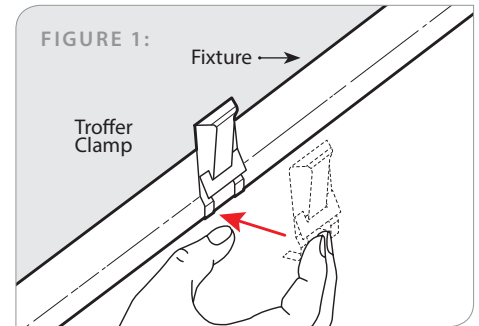


FIGURE 2:



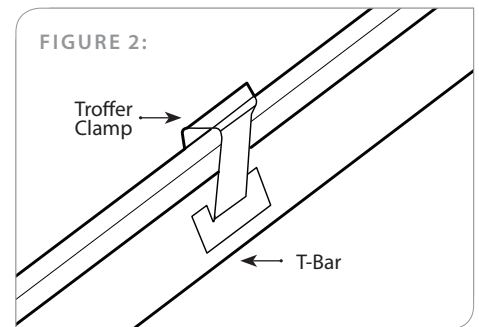


FIGURE 3:

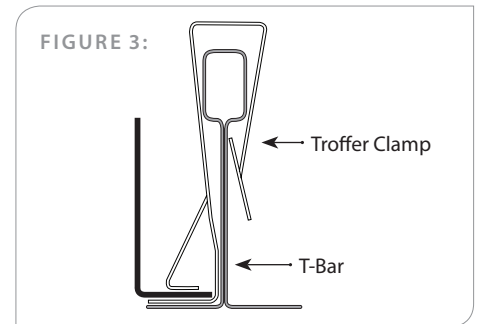

INDIVIDUAL MOUNTING:

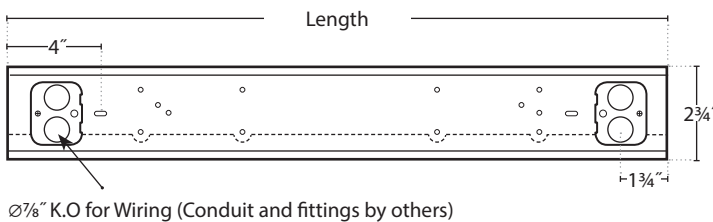

T-BAR CENTER

LENGTH	WIDTH
24"	x3 3/4" Width Opening
36"	
48"	
72"	
84"	
96"	

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear 2" Slot

INSTALLATION INSTRUCTIONS

X1, X2, X6 (T-BAR)



PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

SHALLOW PLENUM


1. Lift housing above t-bar grid and lower it down until rest on t-bars, align top obround to lag bolt. (See figure 1).
2. Place/snap troffer clamp onto grid approximately 6" from housing end (See figures 1, 2 & 3). Use 4 clamps per housing.
3. Make all wire connections through access plates or finish plates.

NOTES:

- Additional support to structural member may be required.
- Check with local building codes for requirement.
- Install finish plates at start and end of rows.

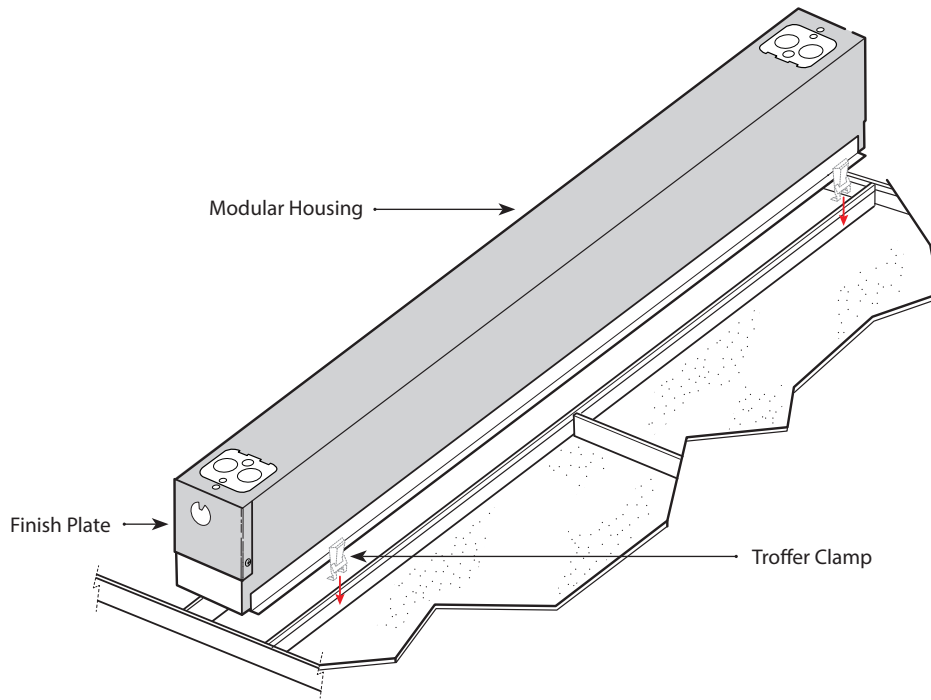


**FIGURE 1
SHALLOW PLENUM (FLUSH)**

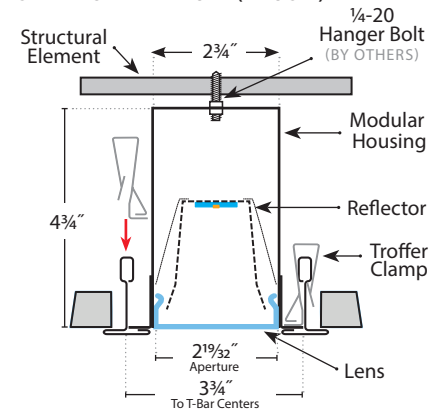


FOR JOINING AND REFLECTOR DETAILS SEE PAGE 3.

FIGURE 2

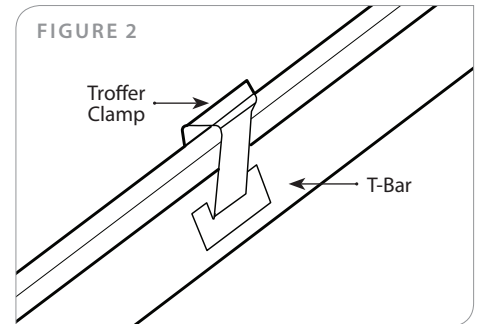


INDIVIDUAL MOUNTING:

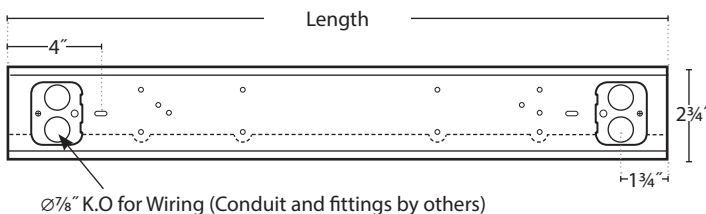

T-BAR CENTER

LENGTH	WIDTH
24"	x3 3/4" Width Opening
36"	
48"	
72"	
84"	
96"	

FIGURE 3

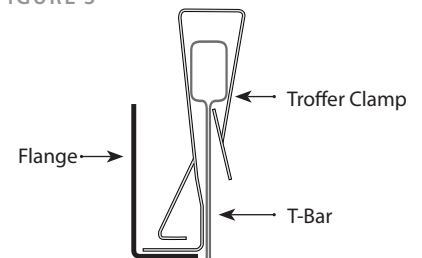

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear

2" Slot

INSTALLATION INSTRUCTIONS


X1, X, X6 (T-BAR)



PRUDENTIAL LTG.

PRULITE.COM 213.746.0360


JOINING DETAIL

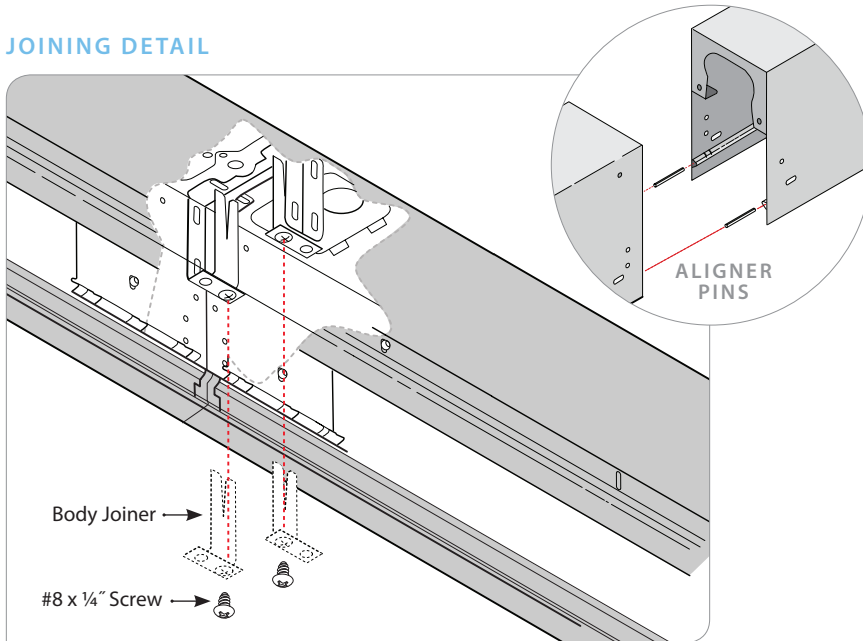


REFLECTOR DETAILS

REFLECTOR REMOVAL DETAIL

Remove reflector assembly to expose mounting obrounds and ballast wire leads, squeeze and pull out at each end of reflector so spring clips disengage from clip support bracket.


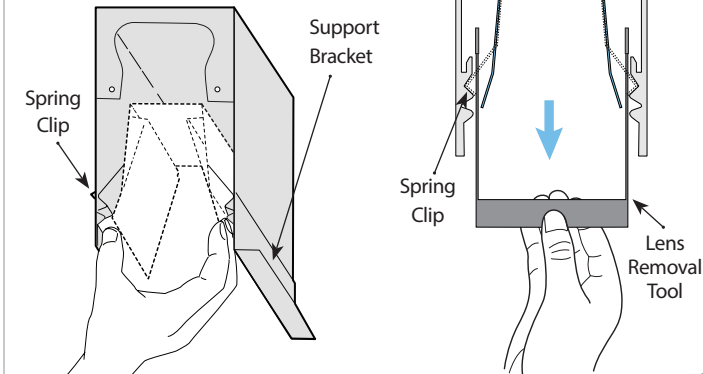


REFLECTOR POSITION

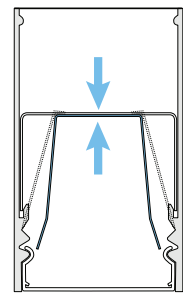


D1 / MWG / MBW

WALL WASH ORIENTATION

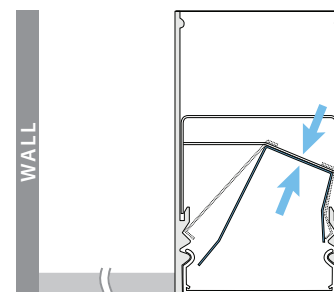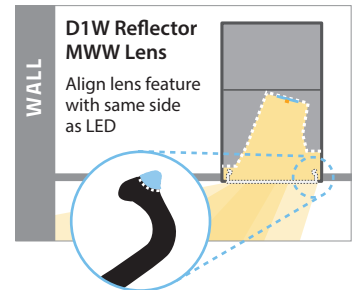

MWW-D1W: WALL SIDE

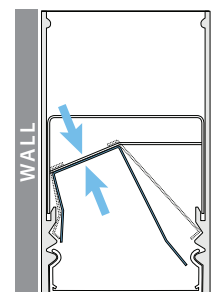

MWW-D1R: ROOM SIDE

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear 2" Slot

INSTALLATION INSTRUCTIONS


FILLER KIT



PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

TOOLS REQUIRED



Power Shears

or



Grinder







Drill


INSTALLATION

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY:

1. Determine **FILLER** location & measure length of filler needed

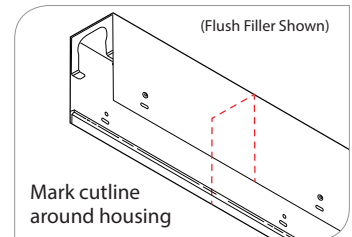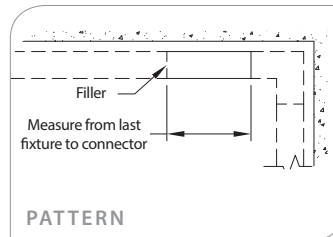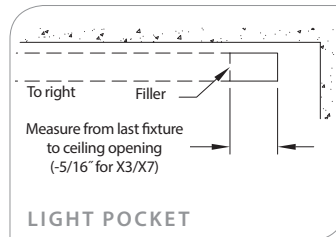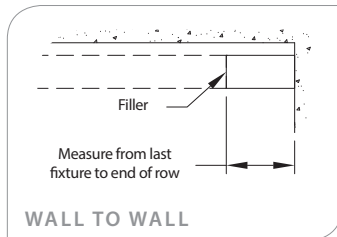


2. Disassemble **FILLER** Kit

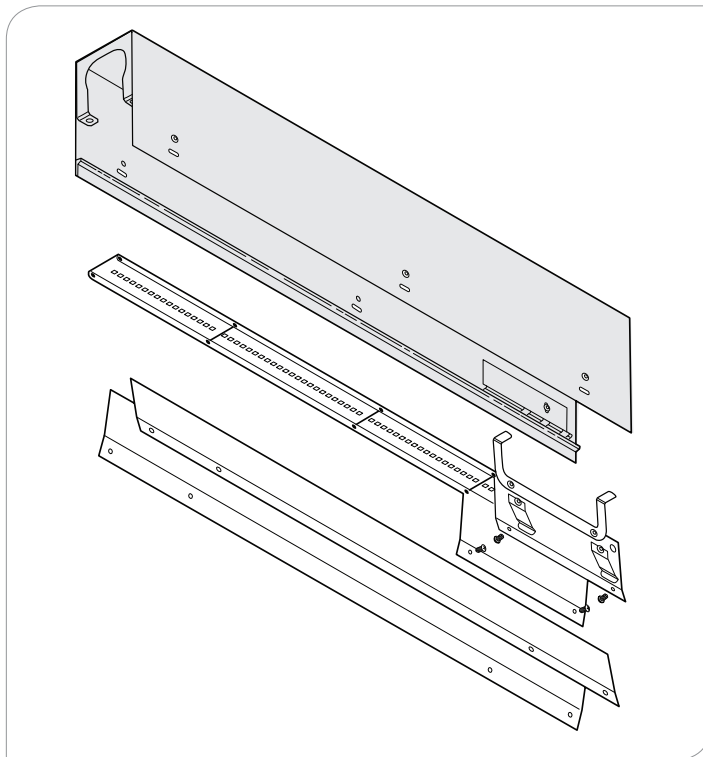


3. Measure Trim and Mark for Cutting

WALL TO WALL & PATTERN

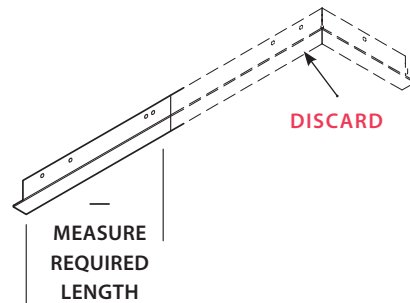

LIGHT POCKET

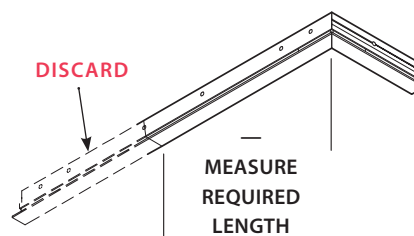

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear 2" Slot

INSTALLATION INSTRUCTIONS


FILLER KIT




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360


4. Cut and discard Filler Housing

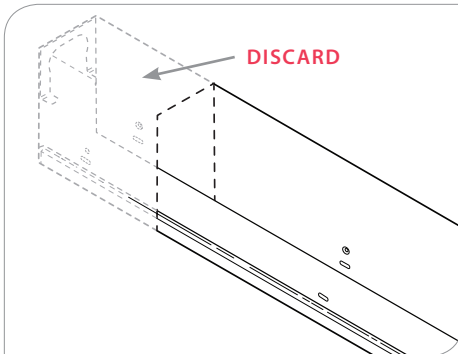


5. Cut and discard reflector

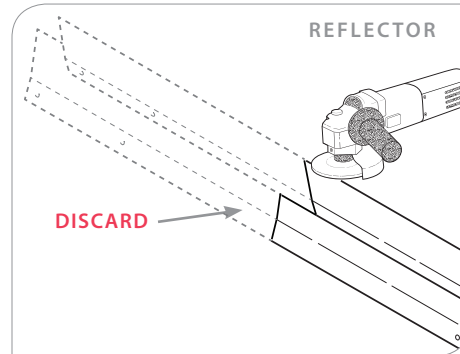


6. Drill and fix end plate

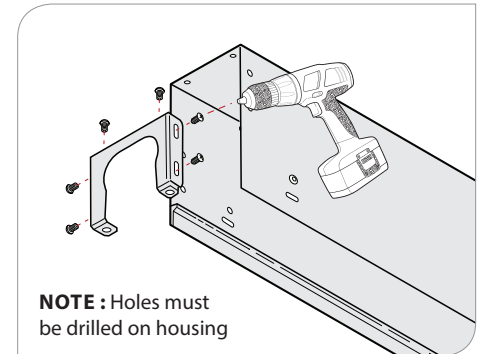

7. Join housings

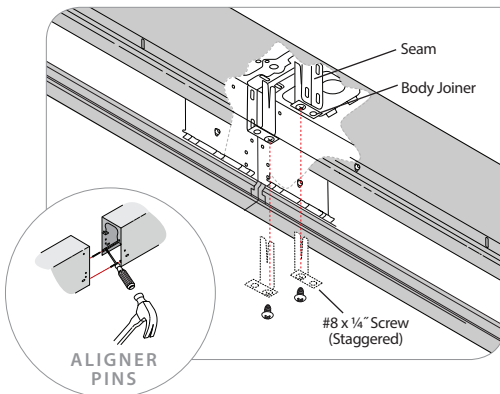


8. Install filler

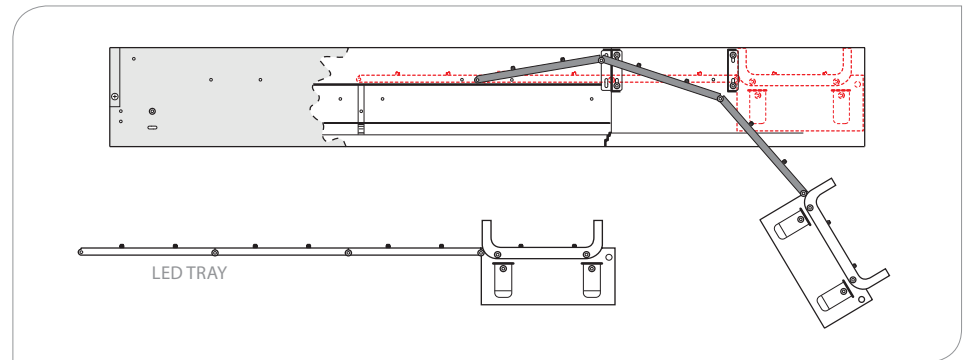

NOTE: Do not cut or remove any section of LED tray as it will cause uneven lights levels in the filler kit. All sections of the LED tray should be rolled under the led reflector in the previous fixture housing.

9. Install Reflectors

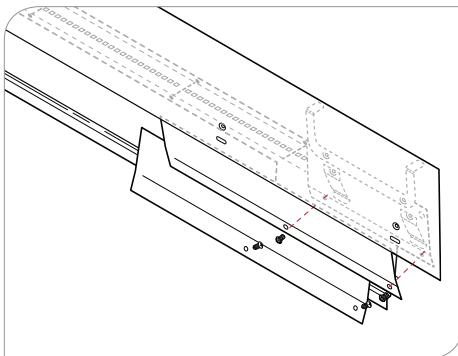

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058