



P23 | Recessed Linear 2" Slot

INSTALLATION INSTRUCTIONS

X3 (HARD CEILING)



PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

PARTS LIST	PART NO.	DESCRIPTION
FINISH PLATES:		
	91459	Flush
	91460	Regress 1
	91461	Regress 3
	91459	Wall to Wall (WTW)
	29513	Aligner Spline
	101504	Body Joiner
	101274	Reflector Removal Tool

PARTS LIST	PART NO.	DESCRIPTION
	82484	Lens Removal Tool
	—	Lens
	100639	Overhead Mounting Bracket
	100-00086-14	#6 x 3/8" Phil Pan Tek Screw
	100-00286-14	#6-32 x 3/16" Sheet Metal Screw
	100-00019-14	#8 x 1/4" HWH SMS Phil Screw
	100-00273-14	7/64" x 1" Aligner Pin

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear 2" Slot

INSTALLATION INSTRUCTIONS

X3 (HARD CEILING)



PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

CEILING PREPARATION


1. Cut ceiling opening to dimensions specified (See rough-in dimension) and screw mounting brackets onto metal studs (Figure 1) or ceiling joists.
2. Remove reflector from fixture. (See reflector detail page 3).
3. Pull supply wires through access plate into the fixture (Figure 2) and mount the fixture to brackets or hanger bolts (shallow plenum).
4. Make all wire connections and replace all reflectors. Snap lens into housing.

ROWS:

5. Insert aligner splines (Figure 3) before mounting the second fixture to brackets. Secure using #6-32 x 3/16 sheet metal screws.

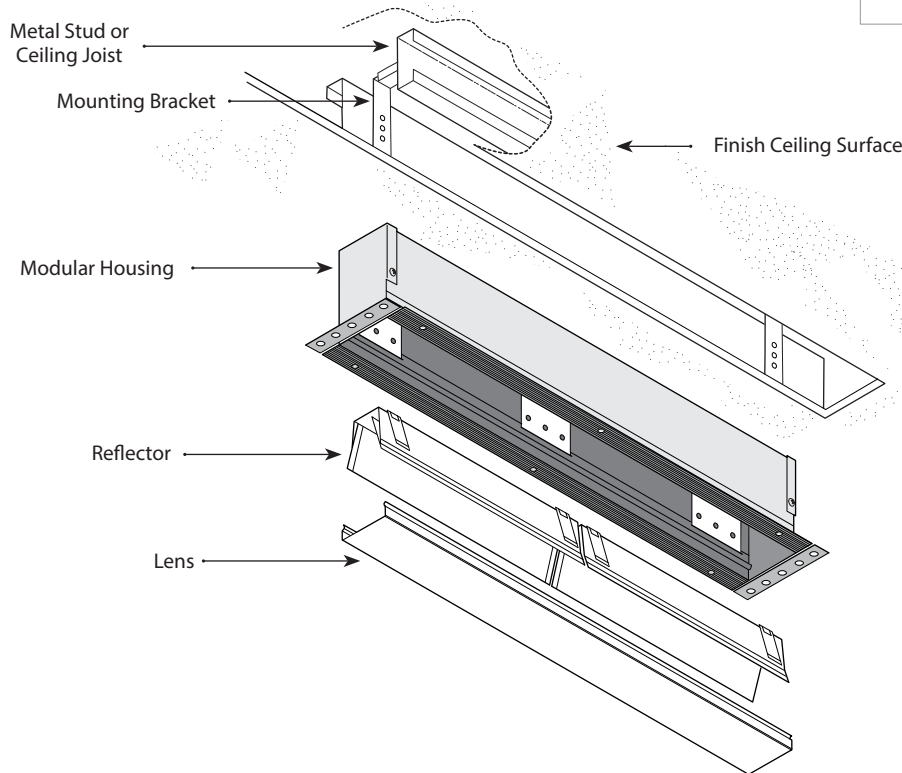


HOUSING CROSS SECTION

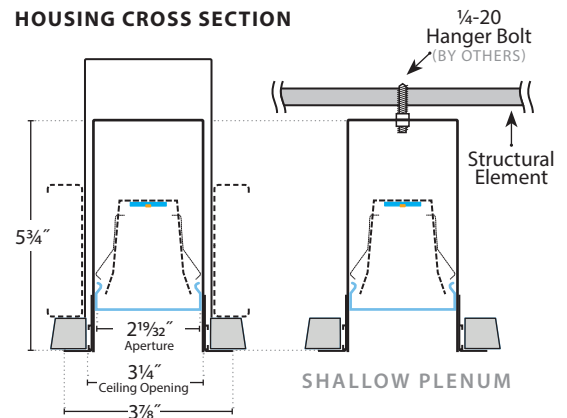

FOR JOINING AND REFLECTOR DETAILS SEE PAGE 4.

FIGURE 1

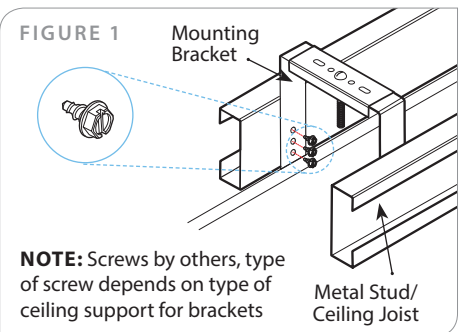

NOTE: Screws by others, type of screw depends on type of ceiling support for brackets

FIGURE 2



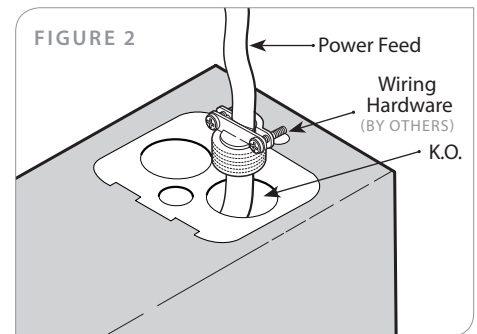


FIGURE 3

INSTALL PRIOR TO DRYWALL

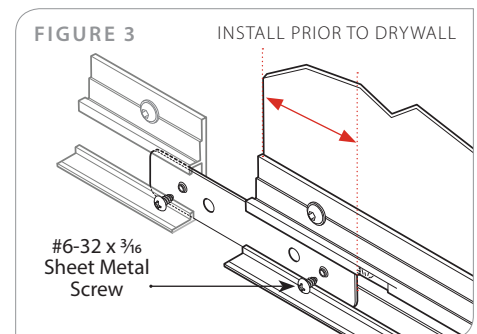

INDIVIDUAL MOUNTING:

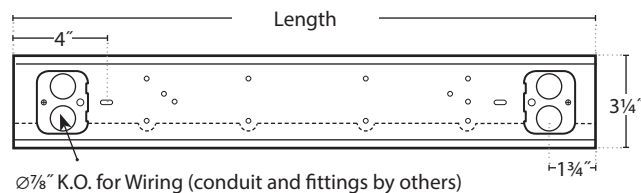

NOTE:
LP — Add 3/8" to length of row / WTW — Add 1/2" to length of row

ROUGH-IN DIMENSIONS:

LENGTH	CEILING OPENING	WIDTH
24"	24 5/8"	x 3 1/4" Width Opening
36"	36 5/8"	
48"	48 5/8"	
72"	72 5/8"	
84"	84 5/8"	
96"	96 5/8"	

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear

2" Slot

INSTALLATION INSTRUCTIONS


X3 (HARD CEILING)



PRUDENTIAL LTG.

PRULITE.COM 213.746.0360


JOINING DETAIL

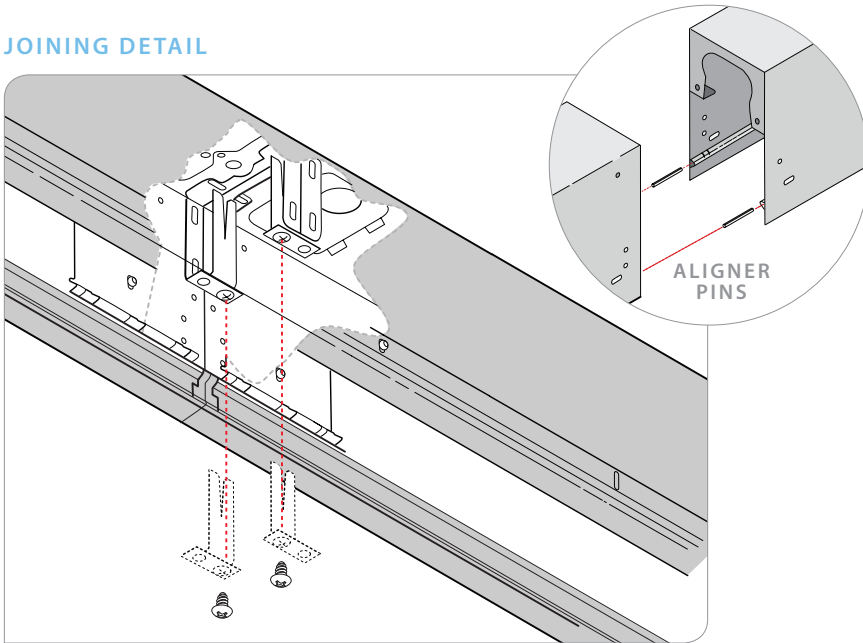


REFLECTOR DETAILS

REFLECTOR REMOVAL DETAIL

Remove reflector assembly to expose mounting obrounds and ballast wire leads, squeeze and pull out at each end of reflector so spring clips disengage from clip support bracket.

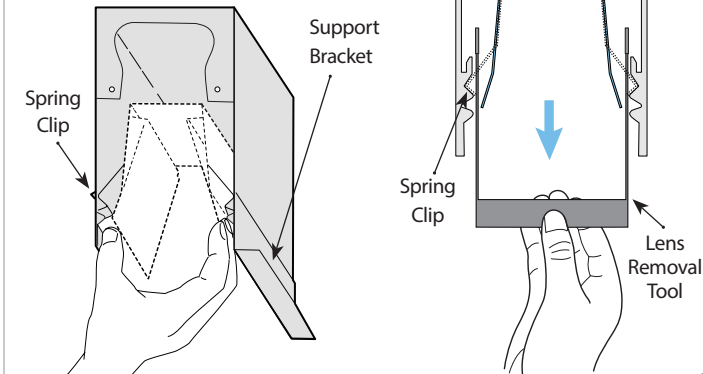


REFLECTOR POSITION

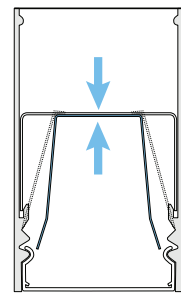


D1 / MWG / MBW

WALL WASH ORIENTATION

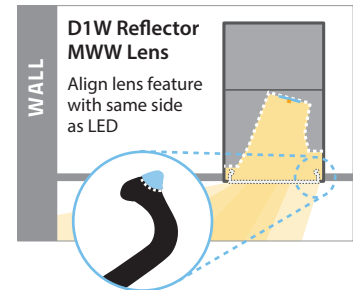


D1W Reflector MWW Lens

Align lens feature with same side as LED

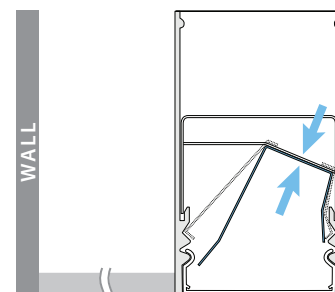

MWW-D1W: WALL SIDE

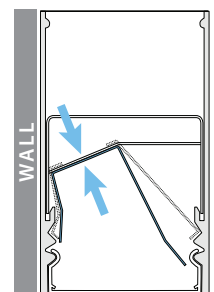

MWW-D1R: ROOM SIDE

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear 2" Slot

INSTALLATION INSTRUCTIONS


FILLER KIT



PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

TOOLS REQUIRED



Power Shears

or



Grinder







Drill


INSTALLATION

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY:

1. Determine **FILLER** location & measure length of filler needed

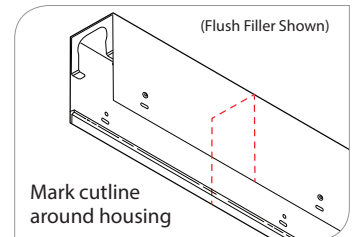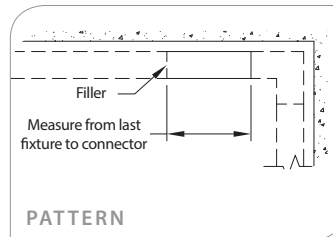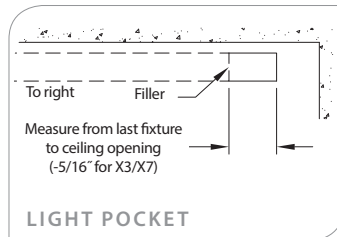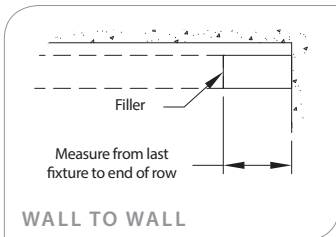


2. Disassemble **FILLER** Kit

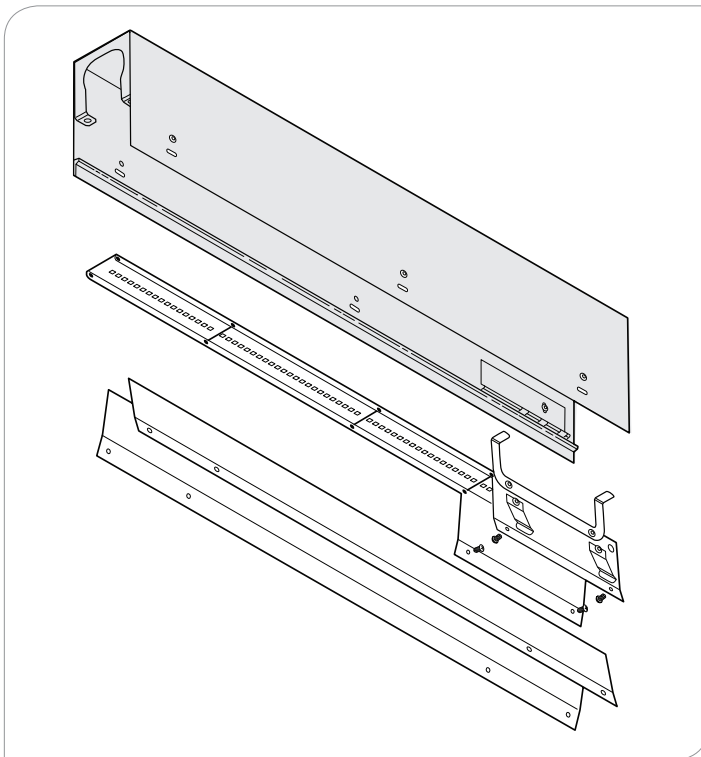


3. Measure Trim and Mark for Cutting

WALL TO WALL & PATTERN

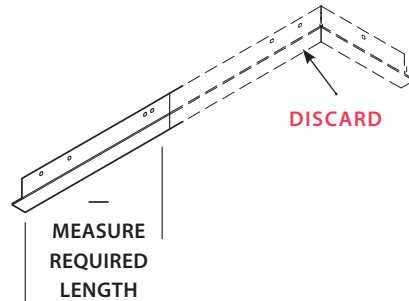

LIGHT POCKET

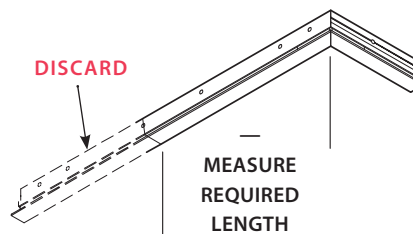

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



P23 | Recessed Linear 2" Slot

INSTALLATION INSTRUCTIONS


FILLER KIT




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360


4. Cut and discard Filler Housing

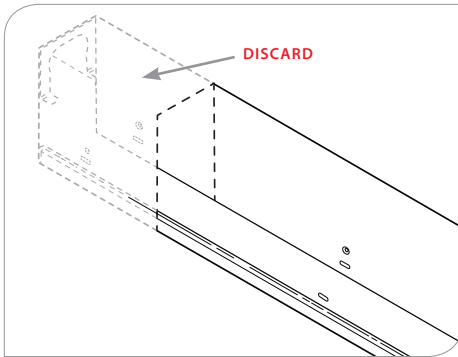


5. Cut and discard reflector

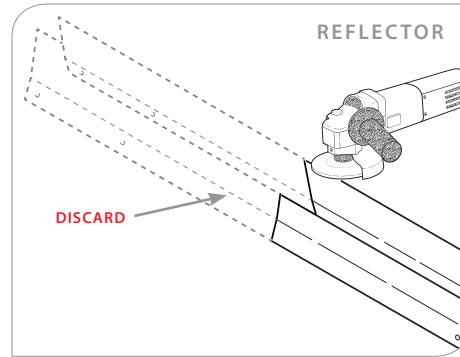


6. Drill and fix end plate

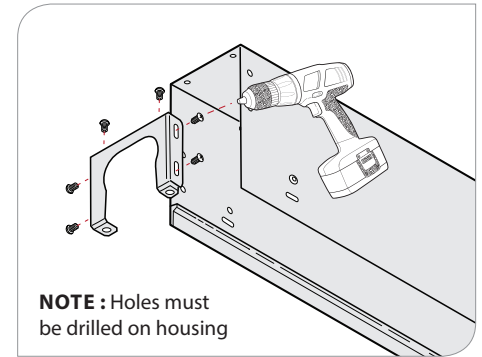


7. Join housings

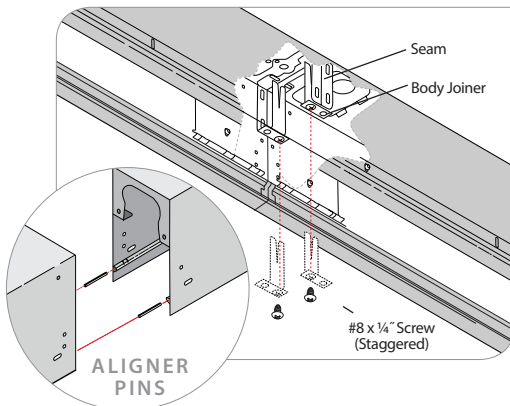

8. Install filler

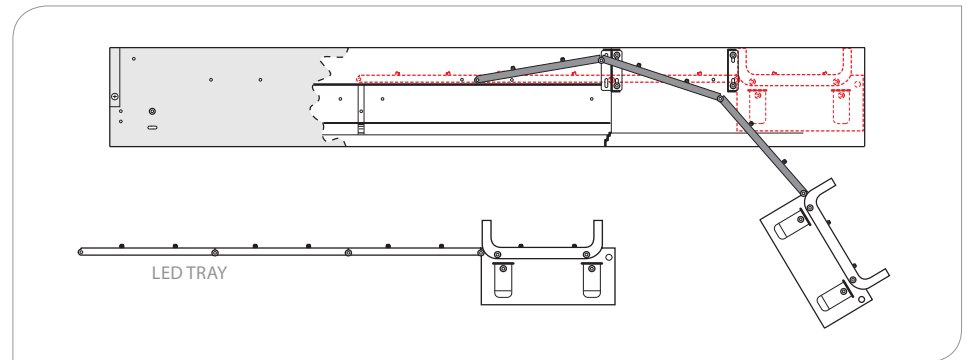

9. Install Reflectors

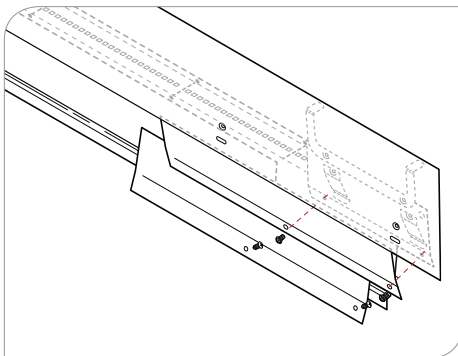

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058