



# P33 | Recessed Linear

## 3" Slot, TechZone 4

### INSTALLATION INSTRUCTIONS





X7 (HARD CEILING CONCEALED FLANGE)







PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

#### PARTS (SHIPPED SEPARATELY)

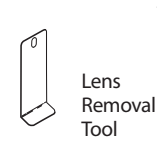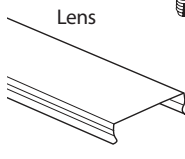
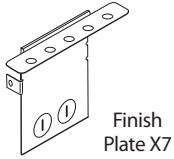


#### MOUNTING BRACKET HARDWARE

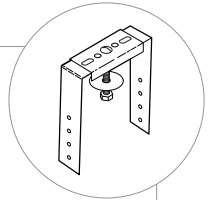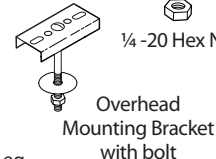


#### NOTES

1. Install fixture and joining hardware, as required, prior to drywall installation.
2. Additional support to structural member may be required. Refer to local building codes.
3. Individual fixtures not intended for row mounting.

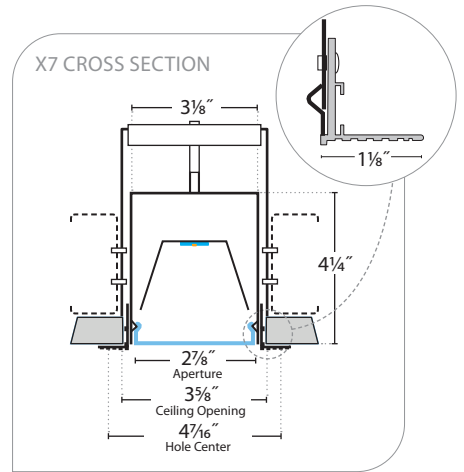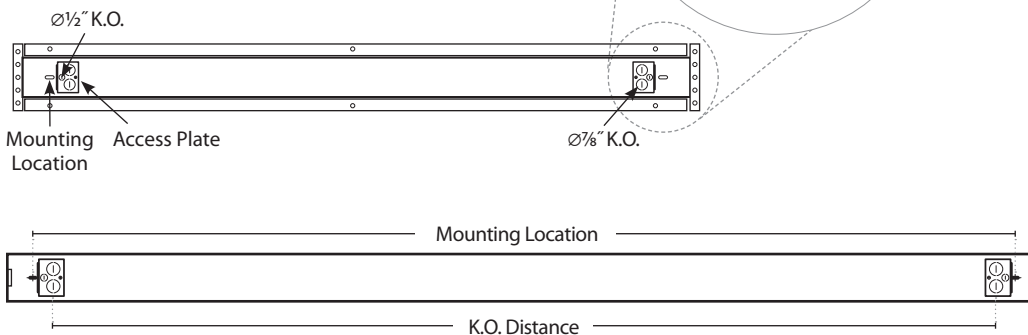


## CEILING OPENING ROUGH IN DIMENSIONS

INDIVIDUAL: ROW DIRECTION: INSTALL FROM LEFT TO RIGHT

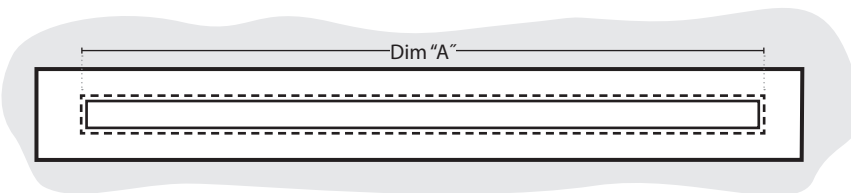

Fixture	Mounting Location	K.O. Distance	Ceiling Opening Dim 'A'
24" (2')	20"	17 1/8"	24 5/8"
36" (3')	32"	29 1/8"	36 5/8"
48" (4')	44"	41 1/8"	48 5/8"
60" (5')	56"	53 1/8"	60 5/8"
72" (6')	68"	65 1/8"	72 5/8"
84" (7')	80"	77 1/8"	84 5/8"
96" (8')	92"	89 1/8"	96 5/8"

ROW:

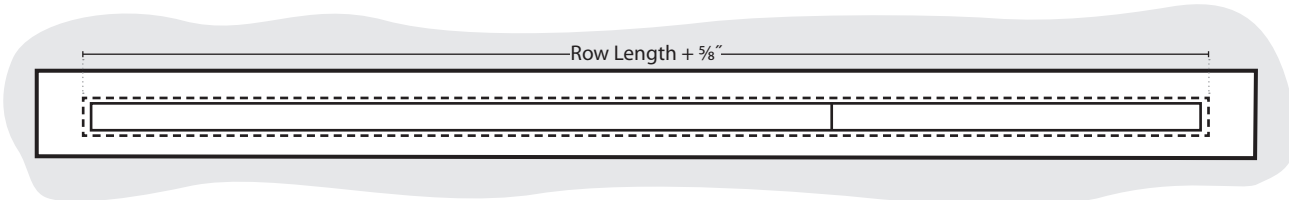

**WARNING:** Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit [prulite.com](http://prulite.com) for most current data.  
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



# P33 | Recessed Linear 3" Slot, TechZone 4

## INSTALLATION INSTRUCTIONS




X7 (HARD CEILING CONCEALED FLANGE)



PRUDENTIAL LTG.




PRULITE.COM 213.746.0360

## IDENTIFYING FIXTURES (AS SHIPPED)

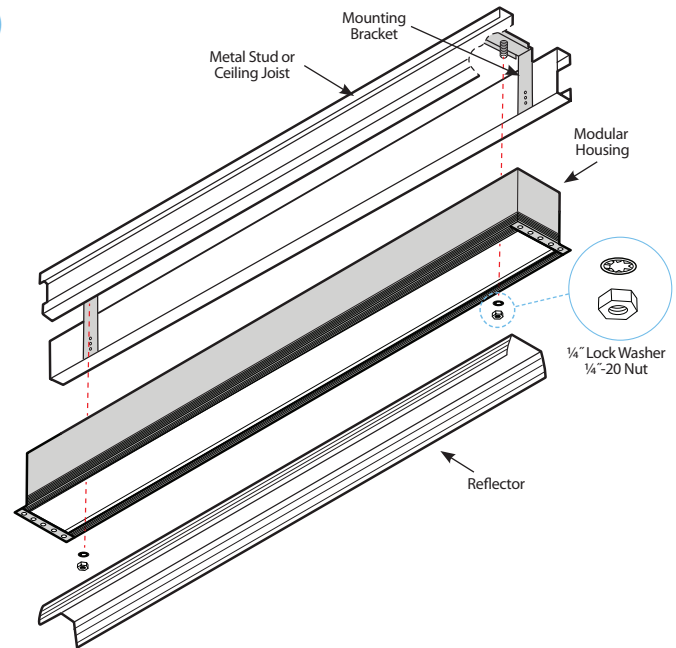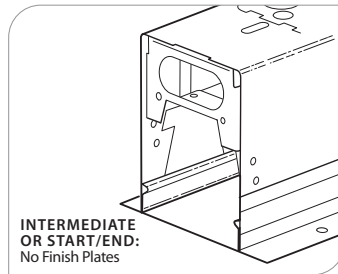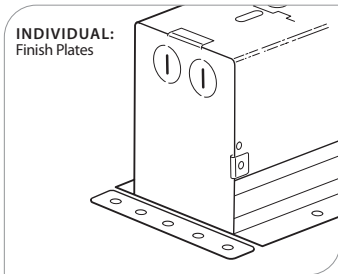







## INSTALLATION

1. Assemble and install mounting brackets and secure bracket legs to studs or ceiling joists (Figure 1).
2. Remove reflector(s) from housing, leaving safety cables in place.
3. Mount fixture to mounting brackets and secure using 1/4" washer and nut.
4. Make all wiring connections thru access plate(s) (Figure 2).
5. Replace reflector(s).
6. Install drywall.

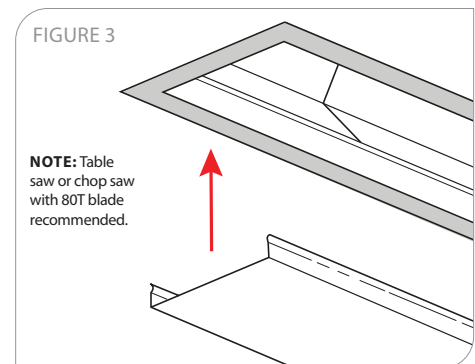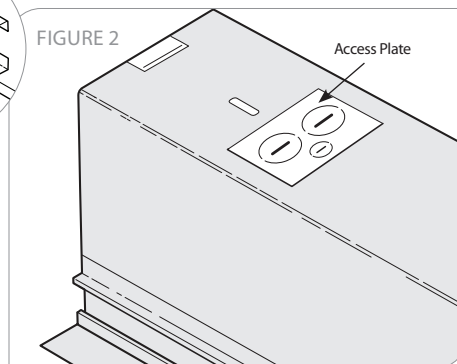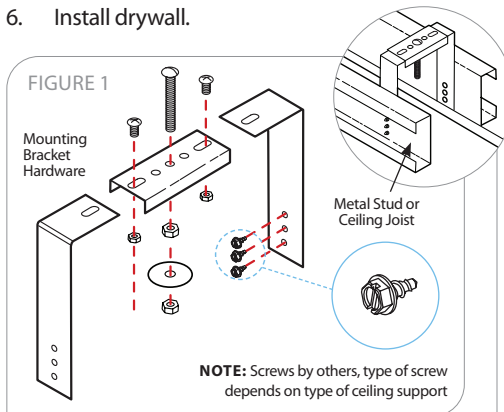

## AFTER DRYWALL INSTALLATION

1. Place aperture guide into housing (Figures 4A & 4B) at each mounting hole location, 3 gauges per fixture.
2. Secure trims to drywall using drywall screws (by others), Drive screws straight up (Angled screws may distort the fixture and provide difficulties when mudding).
3. Remove aperture guides. Test lens(es) for proper fit. Aperture guides can be discarded after lens testing. **LENS(ES) SHOULD SNAP IN TIGHT WITH NO BOWING OR SAGGING.**
4. Tape and mud up to, but not past, trim edge (Figures 6 & 7).

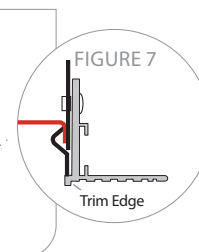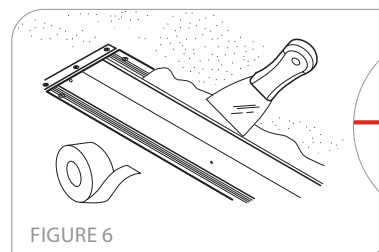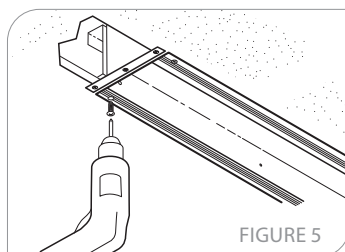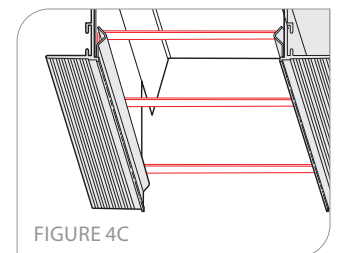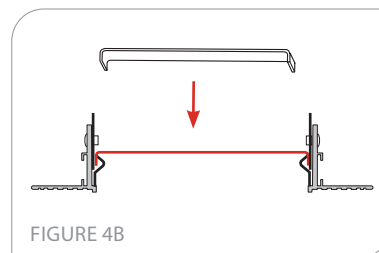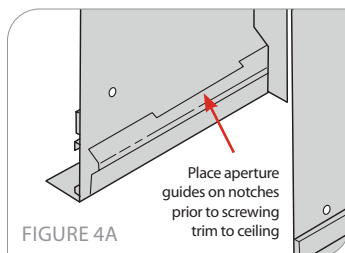

**WARNING:** Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit [prulite.com](http://prulite.com) for most current data.  
© 2015 All rights reserved - All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



# P33 | Recessed Linear

## 3" Slot, TechZone 4

### INSTALLATION INSTRUCTIONS

X7 (HARD CEILING CONCEALED FLANGE)













PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

## ROW MOUNTING

1. Install start fixture per instructions on page 2.
2. On second or subsequent fixtures, remove reflector mounting screws (Figure A). Leave safety cables attached (Figure B).
3. Install (2) housing aligner splines per seam, #8 x  $\frac{3}{8}$ " HWH self tap (Figures C, D & E).
4. Slide intermediate/end fixture onto start/intermediate fixture (Figure F).
5. Install (2) fixture joining screws per seam, #8 x  $\frac{3}{8}$ " HWH self tap (Figure G).
6. Install (2) aligner spline screws per seam, #8 x  $\frac{3}{8}$ " HWH self tap (Figure H).
7. Install finish plates (one at each end of the row) using #6-32 x  $\frac{1}{4}$ " (Figures I & J)

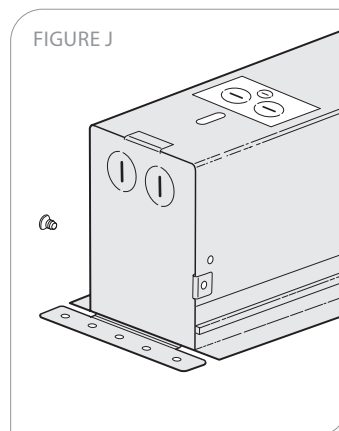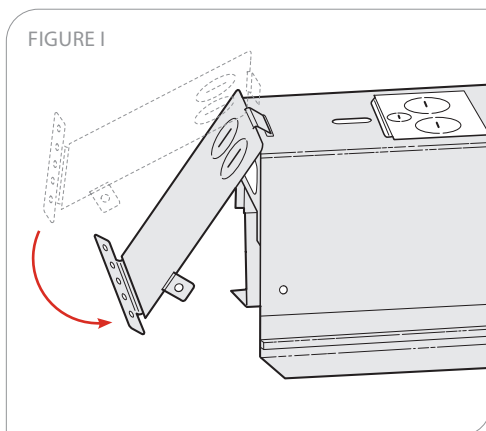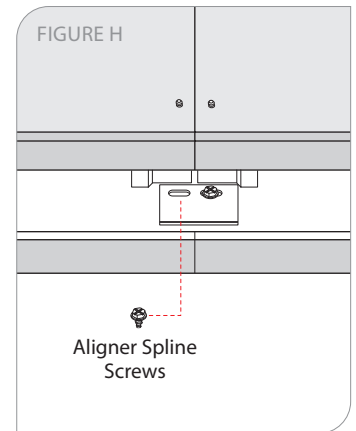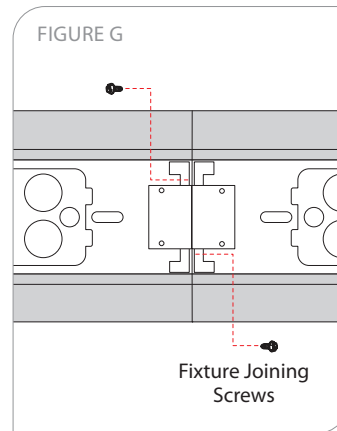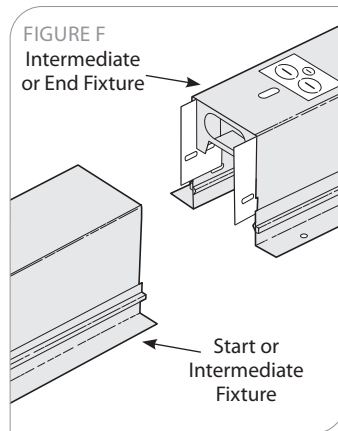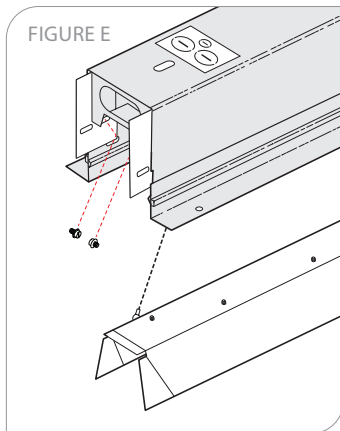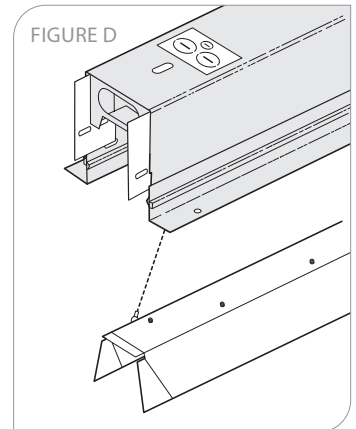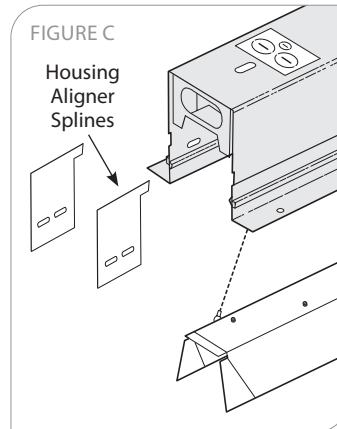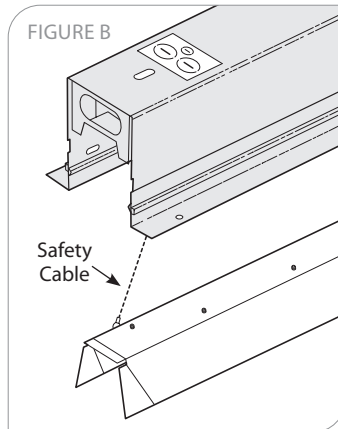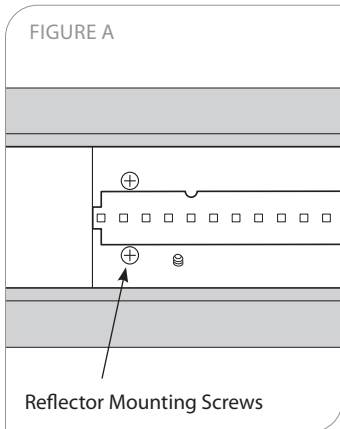

**WARNING:** Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit [prulite.com](http://prulite.com) for most current data.  
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



# P33 | Recessed Linear 3" Slot, TechZone 4

## INSTALLATION INSTRUCTIONS

### FILLER KIT




PRUDENTIAL LTG.


PRULITE.COM 213.746.0360

## INSTALLATION


### 1. Disassemble Filler.

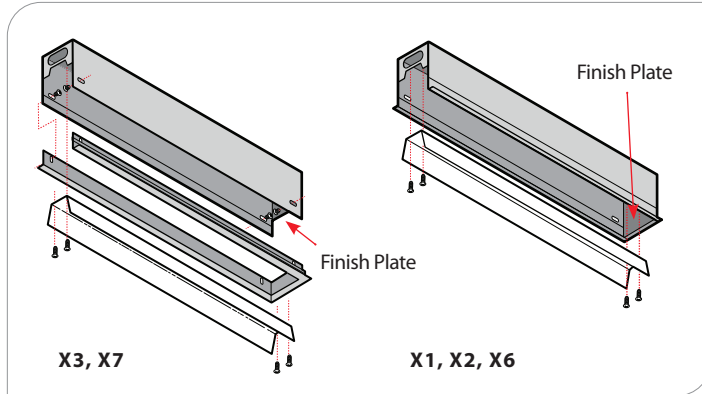


### 2. Mark cut line and cut filler body.

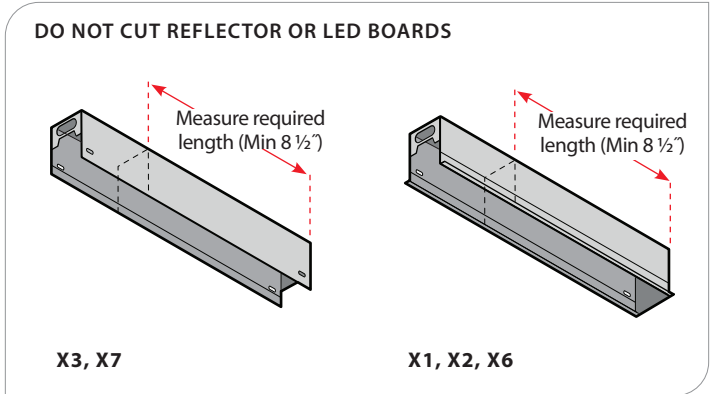



### 3. Measure trim and mark for cutting.

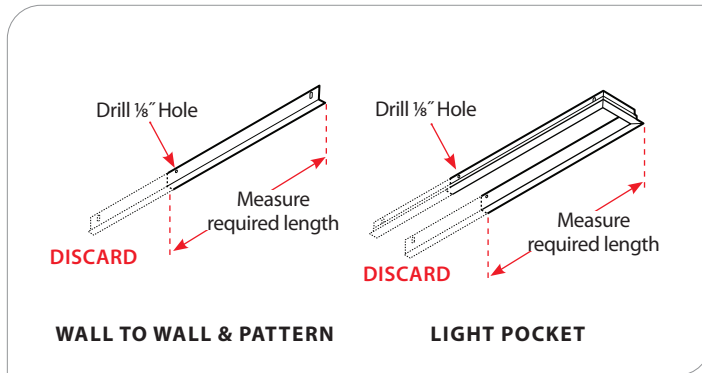

### 4. Drill and fix end plate and trim.

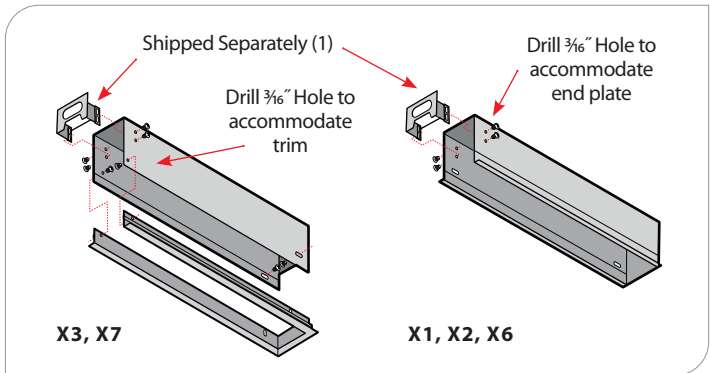

### 5. Install spacers to reflectors to filler.

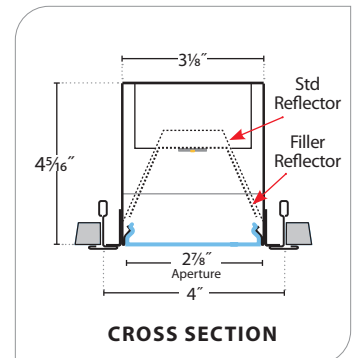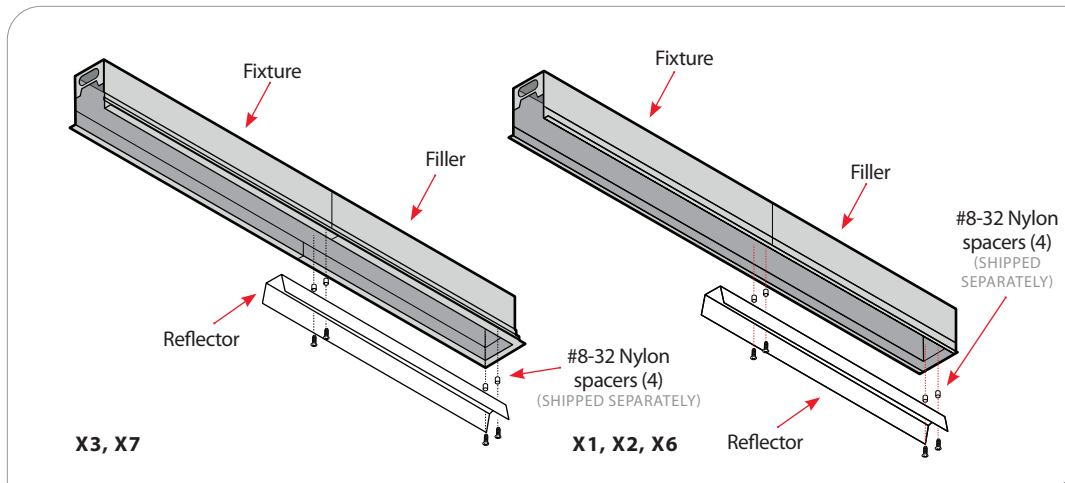

**WARNING:** Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit [prulite.com](http://prulite.com) for most current data.  
© 2015 All rights reserved - All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058