
INSTALLATION INSTRUCTIONS

PRULITE.COM 213.746.0360

X7 (HARD CEILING)

PARTS LIST

105367	SPANNER BRACKET ASSEMBLY KIT	1
104002	Spanner Bracket — Outside Rail	2
104003	Spanner Bracket — Inside Rail	2
163036	Spanner 36 extension Rail	2
100-00190-14	SL Hex Washer HD Type F (8-32 x 3/8)	8

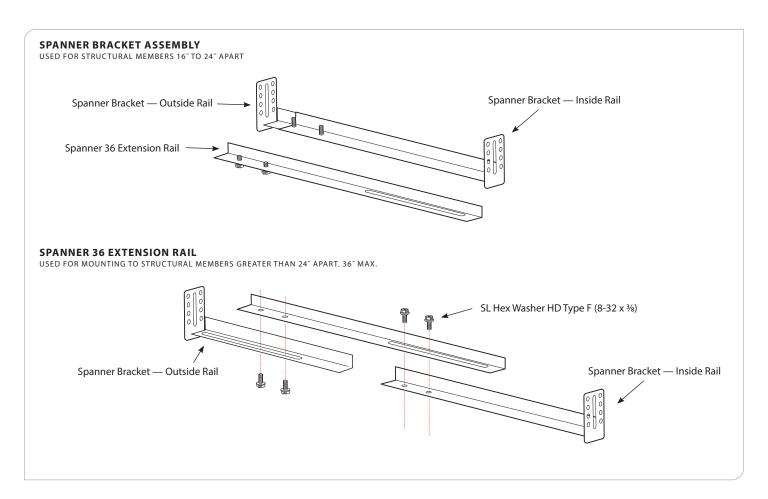

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.



INSTALLATION INSTRUCTIONS

X7 (HARD CEILING)



BASIC INSTALLATION OF ROUGH-IN BOX

LED DRIVER IS IN ROUGH-IN BOX


- Mounting bars are adjustable for ceiling joist spacing from 16"—36". Attach bars to rough-in box using hardware provided.
- Run supply wires through knock-out on either end of rough-in box using appropriate strain relief.

TENSION ARM BRACKET

 If installing module in wall, install tension arm bracket by sliding bracket under two tabs on top of box until dimple in bracket falls into hole.

LED HOUSING INSTALLATION

- Connect DC power wires to matching wires from LED driver in box.
- Attach base unit to ceiling using ¼"
 18 GA crown staples (by others).

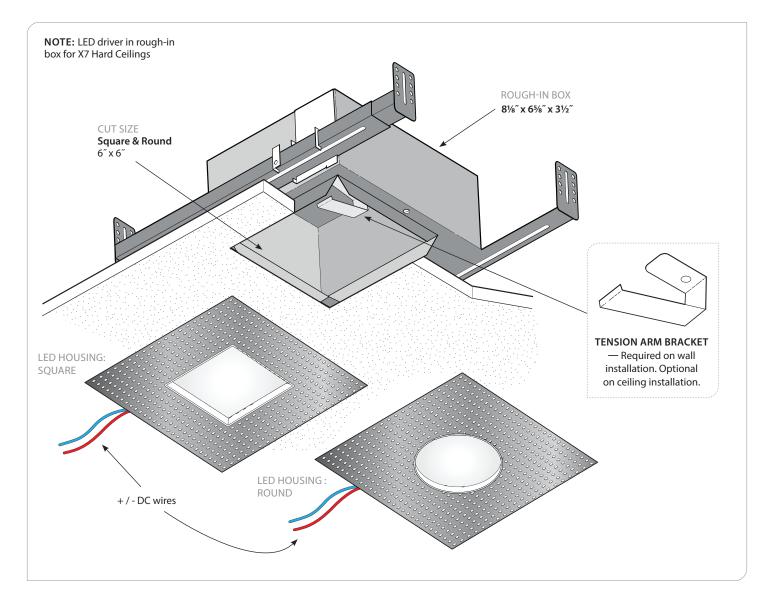

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.


Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.



DRIVER REPLACEMENT


X7 (MUD-IN HARD CEILING)



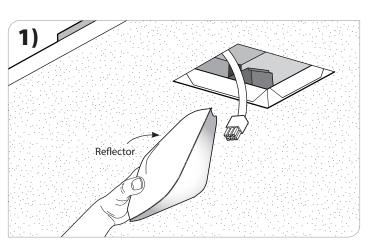


- 1. Remove dome
- 2. Disconnect led board from driver


NOTE: The reflector is made of flexible plastic for easy removal.

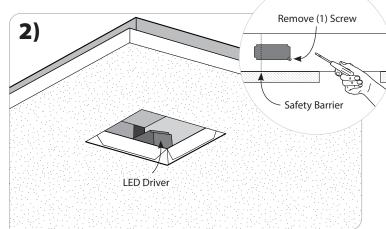

4. Unscrew driver from box, and remove to expose power disconnect

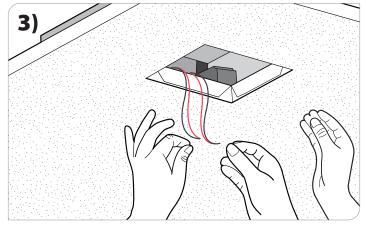

- 5. Unplug driver from power disconnect and remove driver
- 6. Install replacement driver after connecting to power disconnect
- 7. Reverse steps 1-3 to complete install

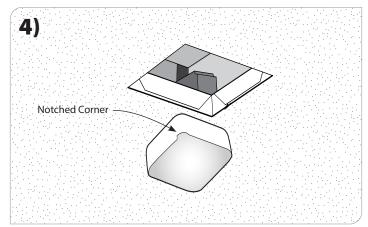

When reinstalling the reflector, note the notched corner is to be placed over DC LED wires where connected to LED boards.

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.


Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.





LED REPLACEMENT


X7 (MUD-IN HARD CEILING)




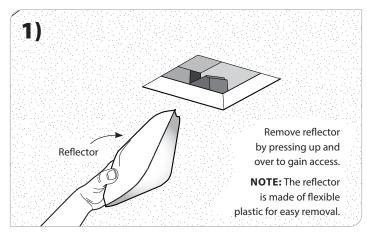

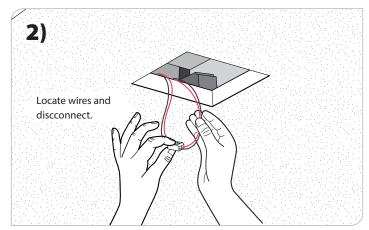

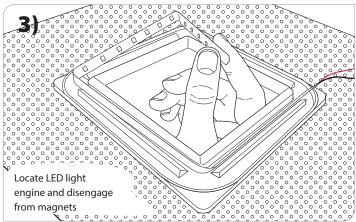

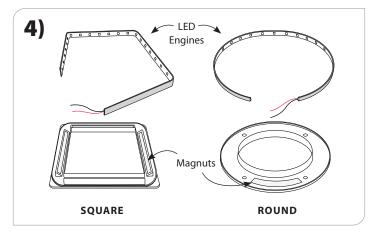

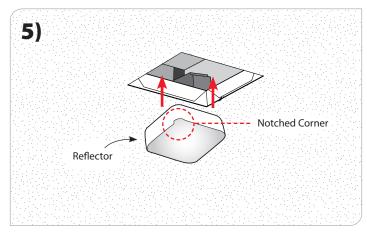

Reinstall reflector.

NOTE: The notched corner is to be placed over the DC LED wires.

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.


Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.







EMERGENCY BATTERY PACK WITH REMOTE TEST KIT (RTK)

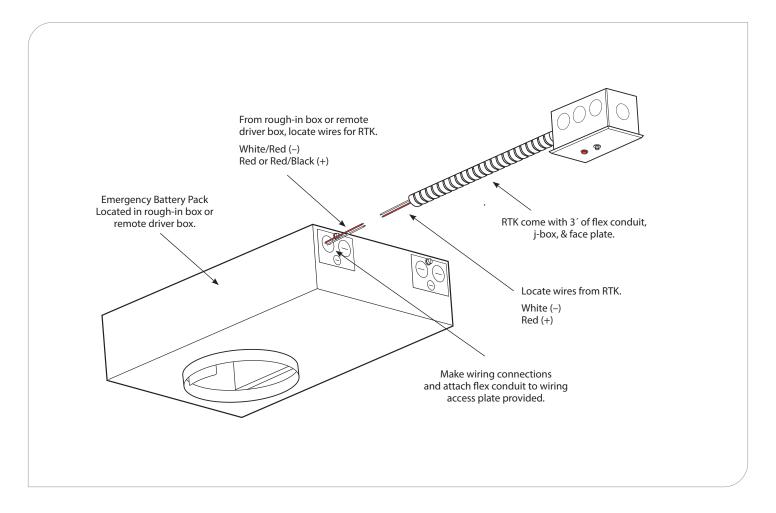

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.

