



Stream™ Dot | Recessed Square & Round

INSTALLATION INSTRUCTIONS

X7 (HARD CEILING) FOR NEW CONSTRUCTION



PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

BASIC INSTALLATION OF ROUGH-IN BOX

LED DRIVER IS IN ROUGH-IN BOX

1. Mounting bars are adjustable for ceiling joist spacing from 16"–24". Attach bars to rough-in box using hardware provided.
2. Run supply wires through knock-out on either end of rough-in box using appropriate strain relief.


TENSION ARM BRACKET

1. If installing module in wall, install tension arm bracket by sliding bracket under two tabs on top of box until dimple in bracket falls into hole.

LED HOUSING INSTALLATION

1. Connect DC power wires to matching wires from LED driver in box.
2. Attach base unit to ceiling using 1/4" 18 GA crown staples (by others).

NOTE: LED driver in rough-in box for X7 Hard Ceilings

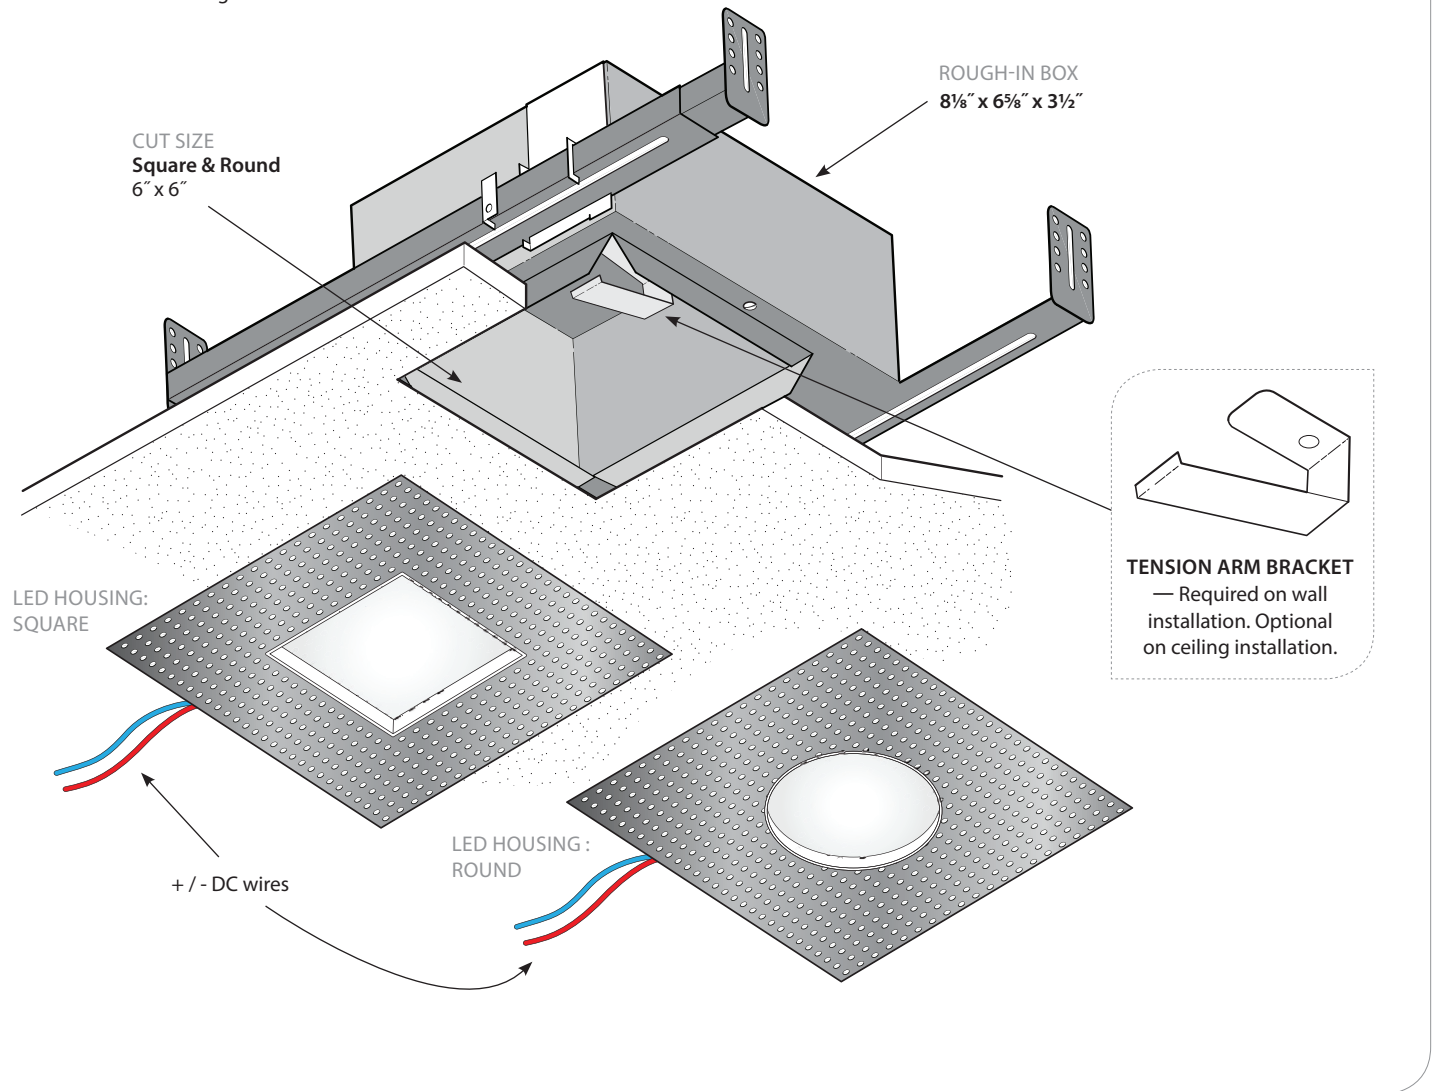

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.

Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que risques inhérents.

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.