



SDP + RDP

Top-Swivel Stem Mount









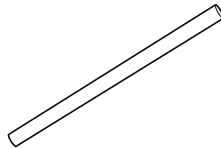


INSTALLATION INSTRUCTIONS

SSC-X3: OFF-TEE (XTP)



PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

PARTS LIST	PART NO.	DESCRIPTION	QTY.
	109995	Square Dot Pendant — Alignment Plate (Square Dot Pendant ONLY)	1
	100-00050-14	8-32 x 7/8" TH MS Phil Screws	2
	100-00047-14	8-32 x 3/8" HHWSL Self Tap Screws	4
	100-00148-08	Mounting Strap	1
	100-00103-08	1/4" I.P.S. Ball Swivel	1
	100-00307-14	1/2" Ext Lock Washer	1
	100-00231-14	1/4" IPS HexLock Nut	2
	100-00032-14	M16 Plain Washer	1
	90934	24" —	1
	90937	48" —	
	90940	96" —	
	—	Custom —	
CANOPIES:			
	109991	Round Dot Pendant Canopy	1
	109993	Square Dot Pendant Canopy	1

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



SDP + RDP

Top-Swivel Stem Mount

INSTALLATION INSTRUCTIONS

SSC-X3: OFF-TEE (XTP)




PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

FIXTURE ASSEMBLY:


1. Attach mounting strap to electrical box. For square fixture use alignment plate (included). For round fixture fasten mounting strap directly to electrical box using (2x) 8-32 x 7/8" TH MS Phil screws.
2. Screw 1/4" I.P.S. ball swivel to one end of the threaded I.P.S. stem. Secure in place with set screw. Insert other end of stem through canopy hole and fasten to access plate with 1/4" IPS lock nuts and washer (provided).
3. Run electrical wires through stem and raise fixture to assembly to ceiling. Insert ball swivel into mounting strap. (**NOTE:** electrical wires provided by others).
4. Make all necessary wiring connections. Hand press canopy onto mounting strap.

NOTE: Mounting strap will accommodate a 3" & 4" octagonal box, or a 4" square box with plaster ring.

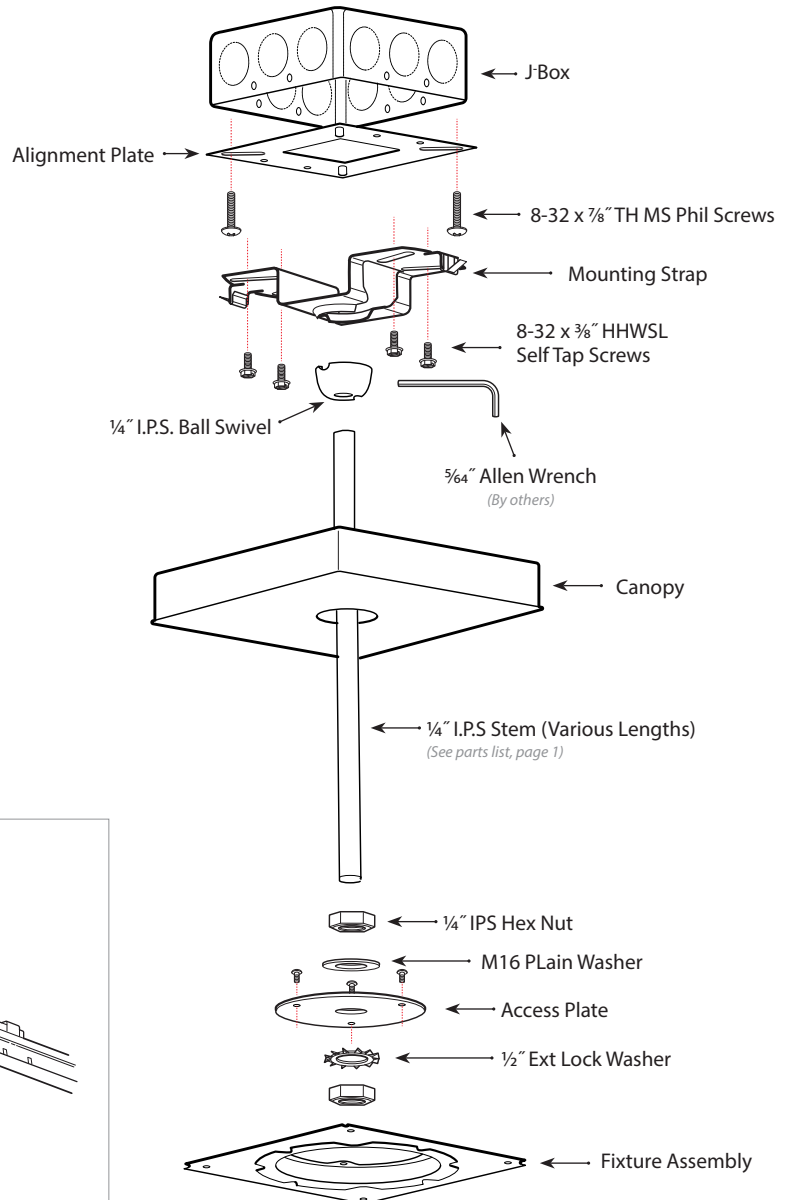

STC-XTP MOUNT:

- Mount using t-bar box hanger bracket (by others).
- Follow same installation steps as above.

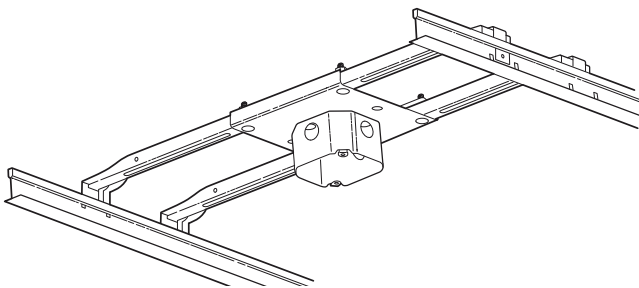

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058