



Stream™ Dot Pendant






PRUDENTIAL LTG.

INSTALLATION INSTRUCTIONS





SCONCE WALL MOUNT (SWM)

PRULITE.COM 213.746.0360

PARTS LIST

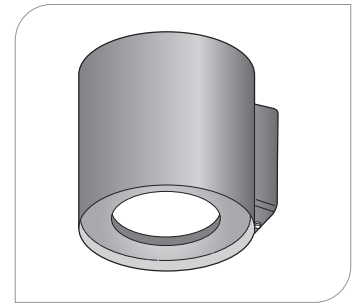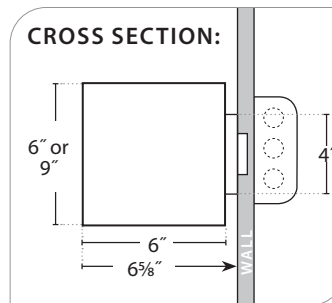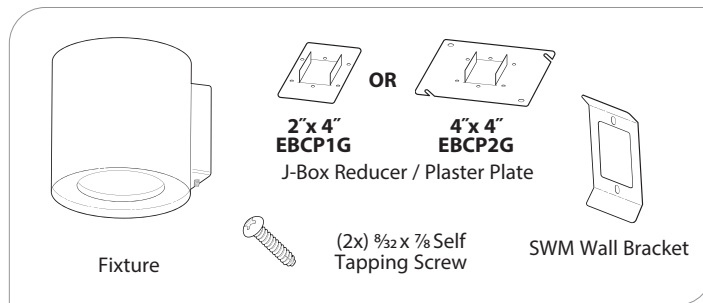

INSTALLATION

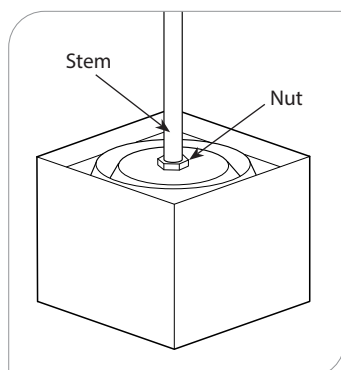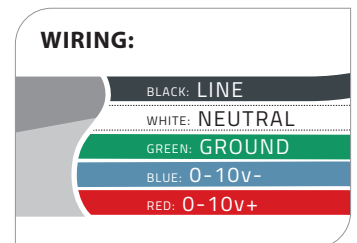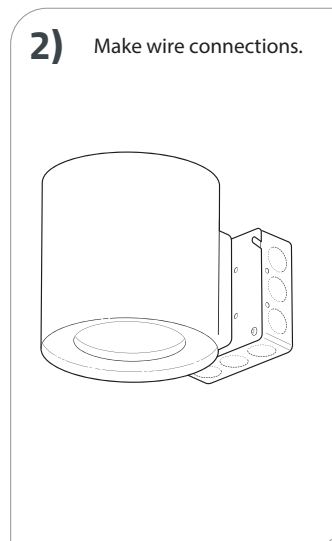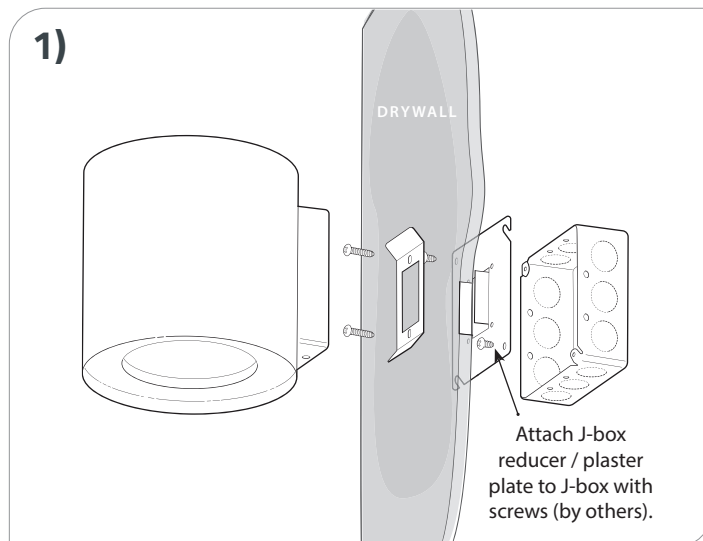

TO STRAIGHTEN THE SDOT PENDANT AFTER INSTALLATION

1. If your fixture has a top glow lens, lift lens out of the way.
2. Slightly loosen nut connecting the stem to the fixture.
3. Hold stem in one hand and rotate the fixture with your other hand.
4. Tighten nut.
5. Repeat as needed.

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.




Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



INSTALLATION INSTRUCTIONS

PRULITE.COM 213.746.0360

EXPLODED VIEW

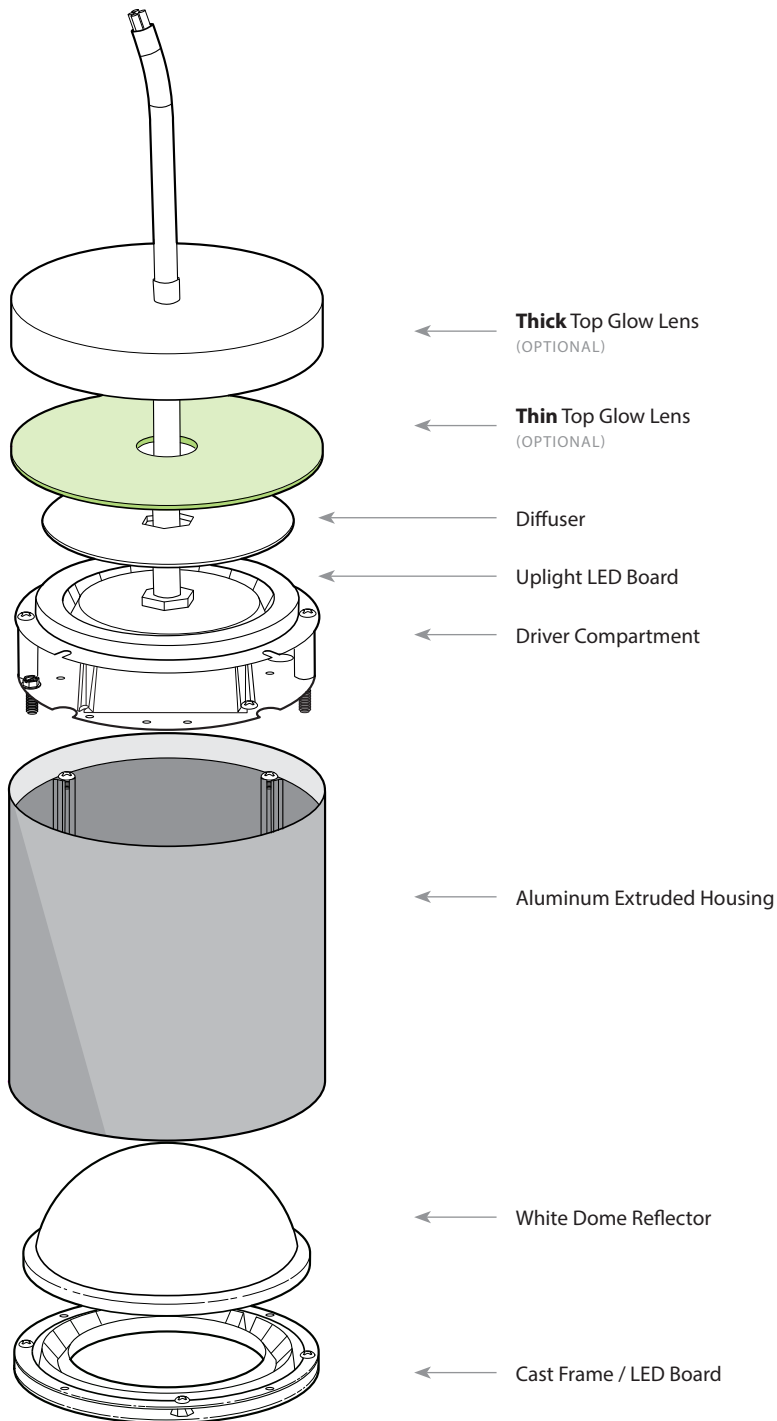

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.

