



# Stream™ Dot Pendant






PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

## INSTALLATION INSTRUCTIONS


### SCONCE WALL MOUNT (SWME)

#### PARTS LIST

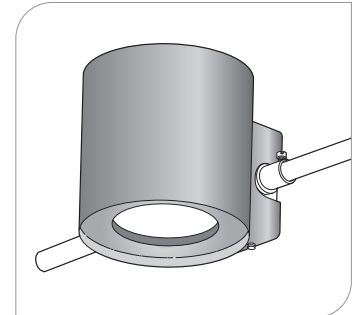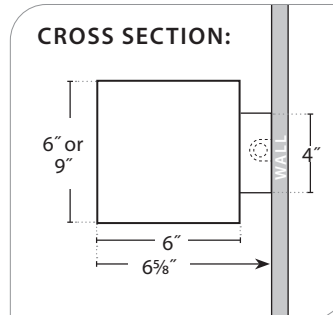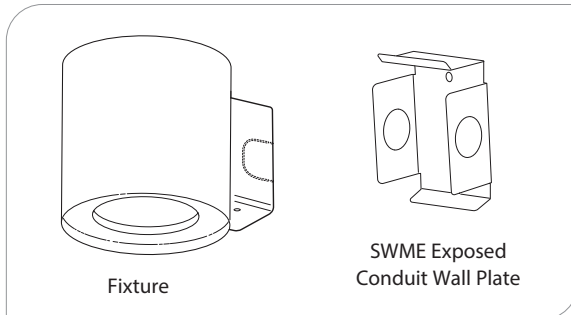


#### INSTALLATION

- 1) — Mount wall bracket using mounting screws (by others).  
— Attach rigid conduit to wall bracket.

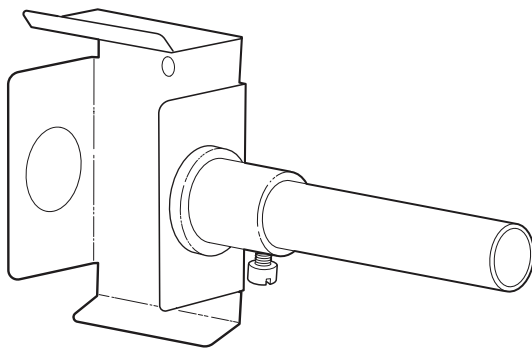

- 2) — Make wire connections.  
— Remove necessary opening tabs on fixture for clearance of conduit.  
— Mount fixture on wall bracket and tighten set screw.

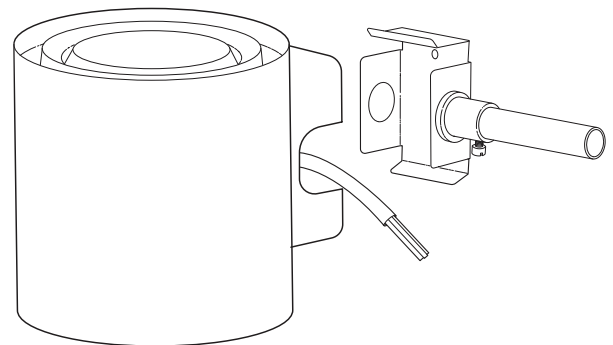

#### WIRING:

BLACK: LINE  
WHITE: NEUTRAL  
GREEN: GROUND  
BLUE: 0-10V-  
RED: 0-10V+

**WARNING:** Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.




Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit [prulite.com](http://prulite.com) for most current data.  
© 2015 All rights reserved – All products manufactured at: Prudential Ltg. 1774 E. 21st Street, Los Angeles, CA 90058



## INSTALLATION INSTRUCTIONS

PRULITE.COM 213.746.0360

### EXPLODED VIEW

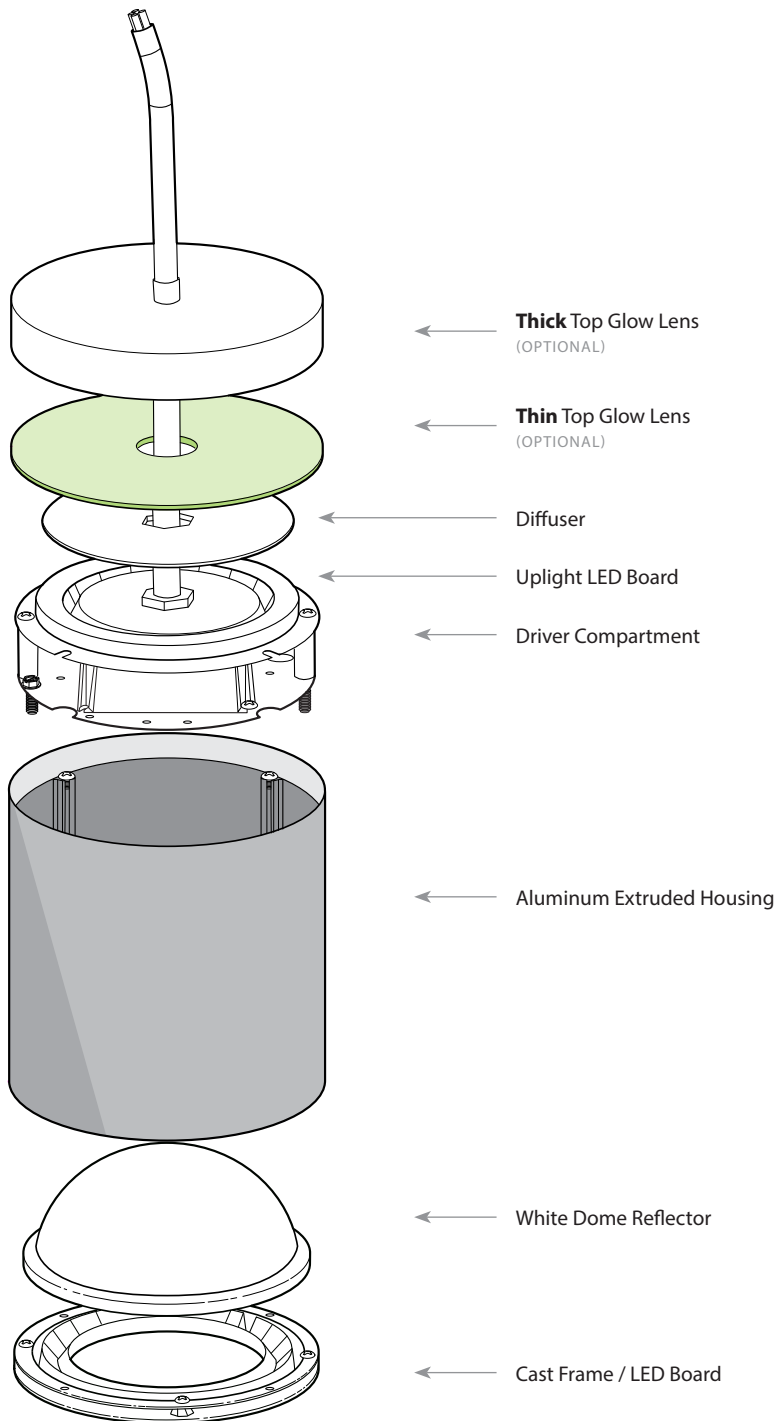

**WARNING:** Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.

