

PRULITE COM 213.746.0360


INSTALLATION INSTRUCTIONS


C2-60 CORNERS

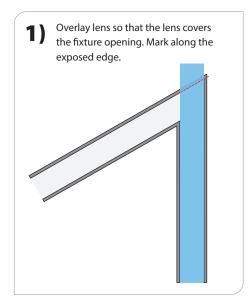




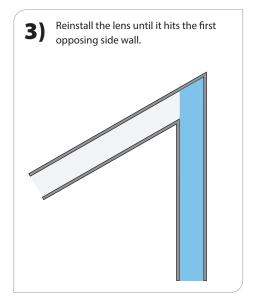

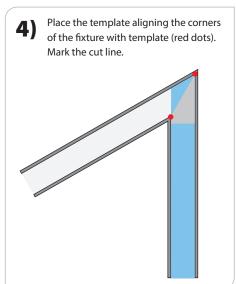



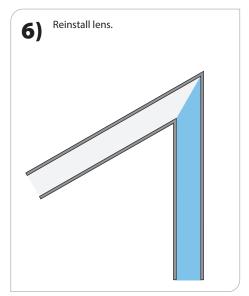

7)

Repeat for remaining leg, installing lens sleeve before the second lens.


PRUDENTIAL LTG.


PRIJLITE COM 213 746 0360

INSTALLATION INSTRUCTIONS


C2-90, 120, 135 CORNERS


OPTION 1SAL LENS ONLY

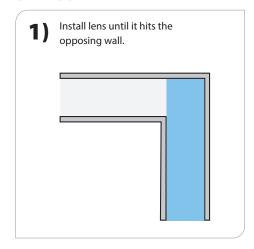


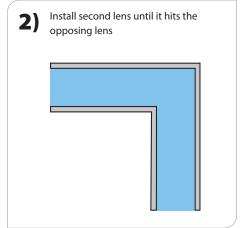


OPTION 2

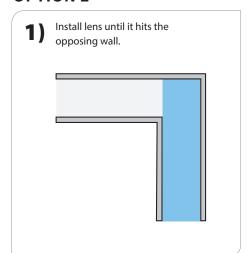

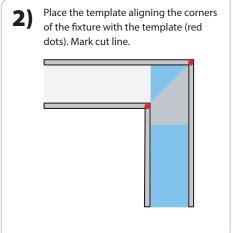

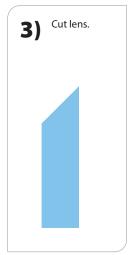


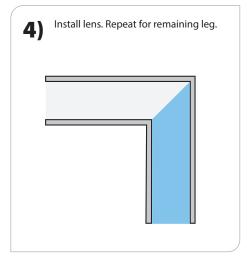






INSTALLATION INSTRUCTIONS

3-T, Y CORNERS

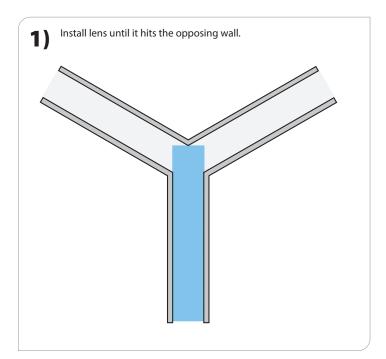

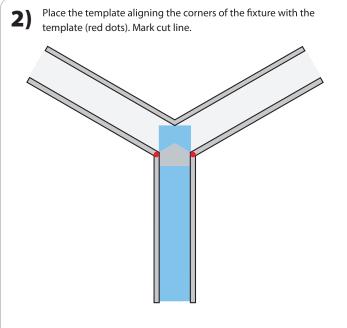

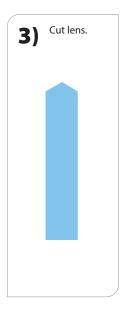

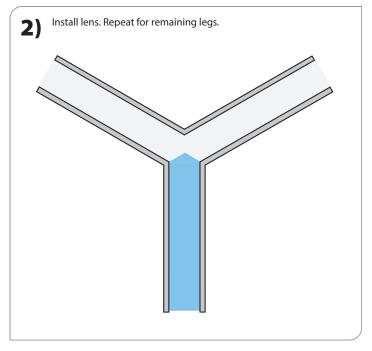



PRULITE COM 213.746.0360

INSTALLATION INSTRUCTIONS

C4-T, X CORNERS

