
BionicPro | Linear
Seismic Attachment
INSTALLATION INSTRUCTIONS

PRUDENTIAL LTG.

PRULITE.COM 213.746.0360

100-00045-14—SLEEVES CRIMP COPPER 1⁄16″ ([x1] PER CABLE)

1. Make sure the fixture (or row) is level, and complete this step before installing the reflectors.
2. Pass the end of the aircraft cable through the griplock and continue to feed the end into the fixture.
3. Route the loose end of the aircraft cable through the provided safety crimp.
4. Continue routing the aircraft cable through the side stiffener hole.
   — DO NOT USE THE CENTER HOLES! THESE ARE FOR THE REFLECTORS.
   — On the BPRO2 use the hole on the bend down tabs on the stiffener.
5. Form a loop around the stiffener and back through the safety crimp to form a loop.
6. Then complete the mechanical crimp to permanently form the loop.
   (Field crimping is the sole responsibility of the installer. Prudential Lighting is not liable for any damage or malfunction resulting from said action.)
7. Trim excess wire.

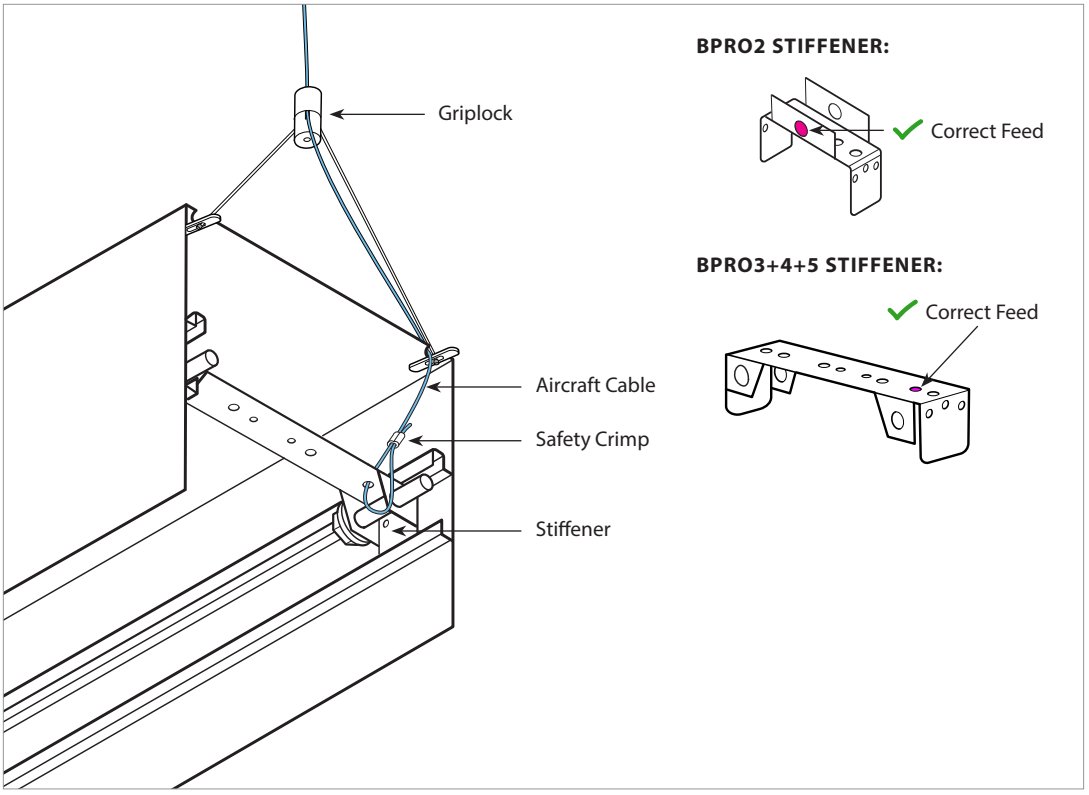

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury
Fixture Installations should ONLY be done by a qualified licensed electrical professional..

USA

Prudential Ltg. reserves the right to change design specifications or materials without notice. Please visit prulite.com for most current data.
© 2026 All rights reserved—All products manufactured at: Prudential Lighting, 1774 E. 21st Street, Los Angeles, CA 90058.