




INSTALLATION INSTRUCTIONS


LED REPLACEMENT KIT

PART	PART NO.	DESCRIPTION
------	----------	-------------


QUICK CONNECTS:



100-00149-09 Static White 18AWG to 22AWG



Replacement LED Reflector with 3' Leads

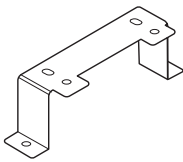

164564 Universal Bracket



100-00199-09 3 Conductor WAGO Compact



100-00299-14 #6-32 x 3/16" Phillips Drive Pan Head Zinc Finish Steel Thread Rolling Screw



100-00486-10 Seam Reflector

PART	PART NO.
------	----------

WIRES:

100-00993-09	Red Solid 18GA
100-00053-09	Blue Solid 18GA
100-00057-09	Red/White Solid 16GA
100-00056-09	Blue/White Solid 18GA


WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



INSTALLATION INSTRUCTIONS


LED REPLACEMENT KIT

- 1)** Remove defective LED reflector from fixture.

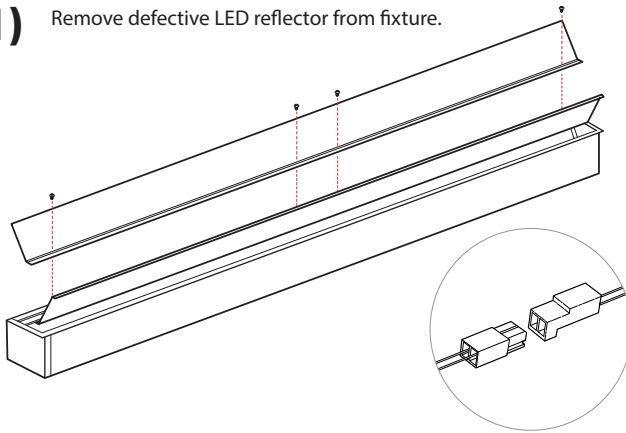


- 2)** 5' & below have same size replacements.
8' / 7' / 6' LED reflectors will be replaced with two LED reflectors (4' + 4' / 4' + 3' / 3' + 3' respectively).

Make sure to identify where the absent stiffener location is as this will be an installation location for a bracket that will support both reflectors.

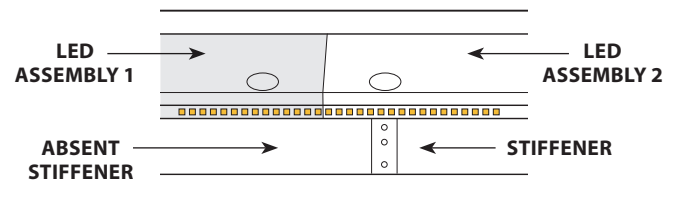


FOR LINEAR FIXTURES SKIP TO STEP 5

- 3)** Slide bracket supplied with kit underneath existing stiffener. Align slot and hole on bracket with holes on stiffener as shown below

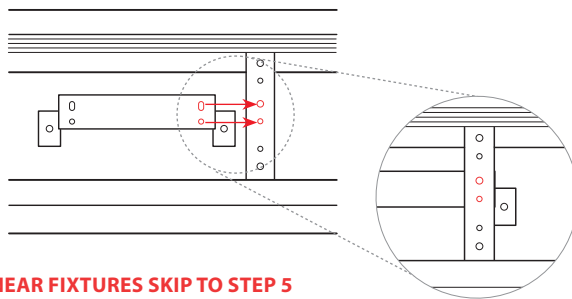


FOR LINEAR FIXTURES SKIP TO STEP 5

- 4)** Install 6-32 screw through stiffener hole into bracket slot to attach bracket as shown below.

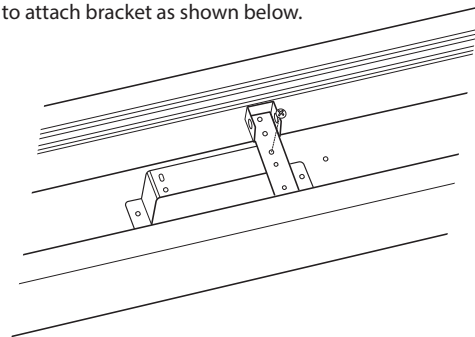


FOR LINEAR FIXTURES SKIP TO STEP 5

- 5)** Two replacement LED assemblies will now need to be wired in parallel. Connect wiring and wiring harnesses to line coming from fixture to split LED power into two sections allowing power to each LED assembly.

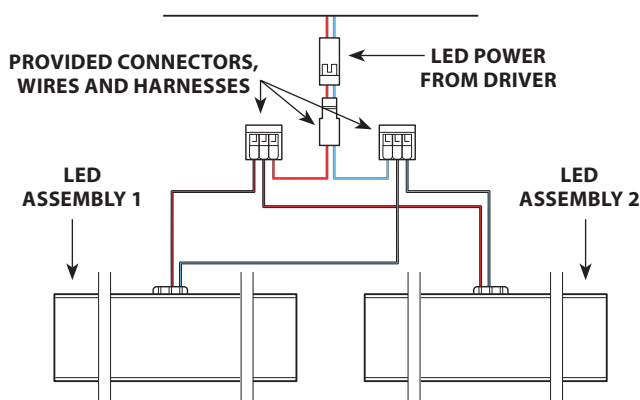

- 6)** Attach wire harness to LED assemblies and reinstall as shown below.

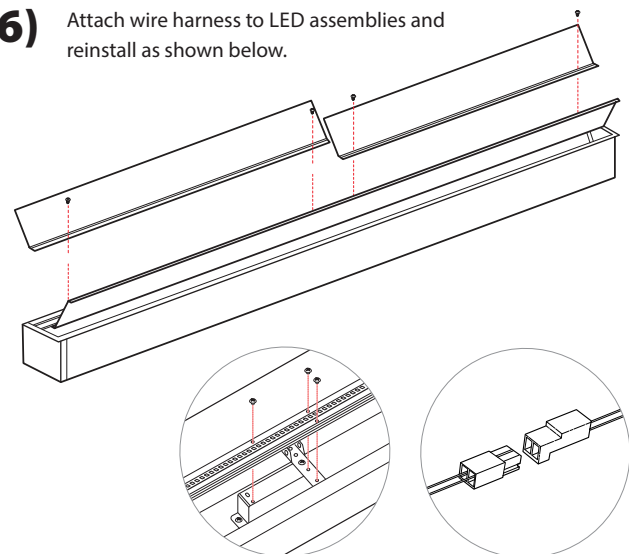


WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.

INSTALLATION INSTRUCTIONS



PRULITE.COM 213.746.0360

LED REPLACEMENT KIT


7a) Tear seam reflector at perforation.
Peel film to reveal adhesive.

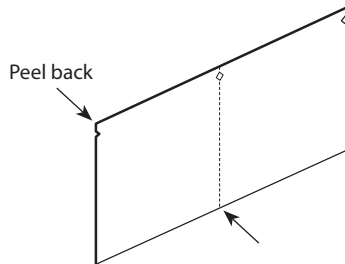

7b) Insert seam reflector under brake.

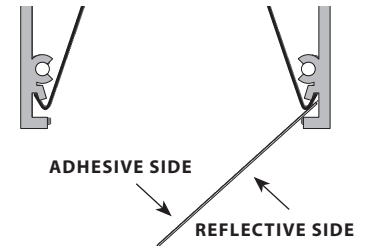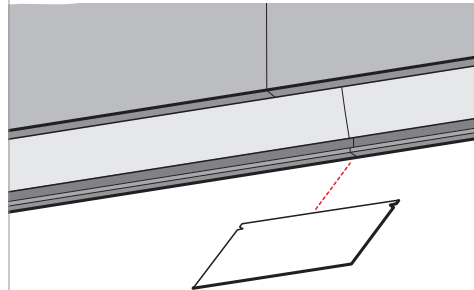

7c) Secure the seam reflector.

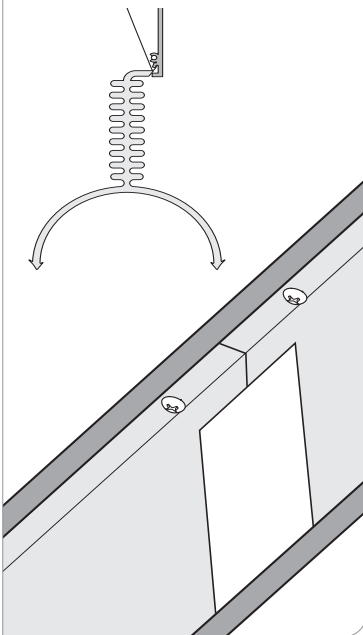

8) Reinstall lens.

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.