
PRULITE COM 213 746 0360

INSTALLATION INSTRUCTIONS

T-BAR (X1)

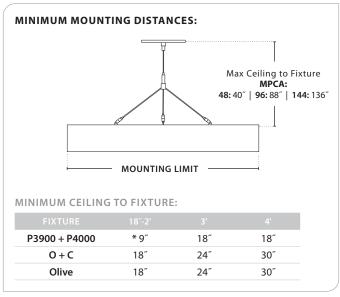

Mounting strap will accommodate a 4" octagon electricalbox without plaster ring. Refer to nec 370-16 for maximum electrical box fill.

PARTS LIST

PART NUMBER	DESCRIPTION	QTY
106701	BioPro Access Plate	1
100-00004-08	I.D.S. Clip (Standard)	1
100-00003-08	I.D.S. 95 Clip (Slot Grid Ceiling Option)	1
100-00091-08	Erico Caddy A.T Clip	1
100-00114-14	1/4-20 x 3/4" Phil Truss H.D. Screw	1
100-00063-08	Metal Strain Relief Bushing	1
100-00040-10	Snap Bushing (White) — 3 or 4 Wire	1
28975	5½" Diameter Canopy (White) — 2-Hole	1
100-00238-14	½″ x 1¼″ Nipple	1
100-00239-14	½″ I.P. Knurled Nut	1
100-00042-10	Threaded Bushing	1
100-00043-10	White Universal Bushing	1
100-00023-09	18 GA. 3 Wire SJT Cord 5"* or 9"**	1
CABLE SUPPORT	ASSEMBLY KITS:	

CABLE SUPPORT ASSEMBLY KITS:

100-00021-08*	53″	Coupler with "Cable	1
		3-Way Cable Adapter	1
100-00024-08**	96″	1/4-20 Keps Lock Nut	3
		Pivoting Cable Glider	3

ASSEMBLY NUMBER — *43034 (53" CABLE) / **43042 (96" CABLE)

Spacers Washers Use if spacing is required Support Wire SEE FIGURE 1. (BY OTHERS) **Electrical Box** Erico Caddy A.T Clip SEE FIGURE 1 0 I.D.S. Clip 1/4-20 x 3/4" **Phil Truss** H.D. Screw ½″ Nipple & Knurled Nut 5-1/2" Ø Canopy (2-HOLE) I.D.S. 95 Clip %" Hole (SLOT GRID Crimped End CEILING OPTION) Threaded Bushing Support Cable **Universal Bushing** ←18 Gauge SJT Straight Cord NOTE: Contractor to field cut and strip power cord to specified lengths 1/4-20 Coupler Threaded Ring FIGURE 1. 1/4-20 x 3/4 Screw → **CABLE SUPPORT** Washer **ASSEMBLY KIT** (BY OTHERS) A.T. Clip Pull Cable & Trim Snap Bushing 0 Pivoting Cable * Access Wiring Glider Plate KO 1/4" Dia. Metal Strain Hole Relief Bushing 1/4-20 Keps **Cutout Hole** Locknut *Access Plate only provided for specific applications. Most applications only require removal of wiring KO for wiring.


WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



^{*} When D9 is ordered minimum ceiling to fixture is 18'

INSTALLATION INSTRUCTIONS


HARD CEILING (X3B)

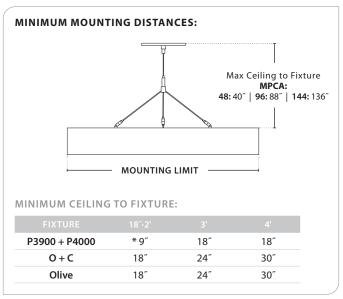

Mounting strap will accommodate a 4" octagon electricalbox without plaster ring. Refer to nec 370-16 for maximum electrical box fill.

PARTS LIST

PART NUMBER		DESCRIPTION	QTY	
MOUNTING STRAP KIT:				
19031		Mounting Strap (X3)	1	
		¼-20 x %″ Pan Head Bolt	1	
		1/4-20 Speed Nut	1	
106701		BioPro Access Plate		
100-00063-10		Metal Strain Relief Bushing	1	
100-00040-10		Snap Bushing (White) — 3 or 4 Wire	1	
28975		5½" Diameter Canopy (White) — 2-Hole	1	
100-00238-14		½″ x 1¼″ Nipple	1	
100-00239-14		½″ I.P. Knurled Nut	1	
100-00042-10		Threaded Bushing	1	
100-00043-10		White Universal Bushing	1	
100-00023-09		18 GA. 3 Wire SJT Cord 5"* or 9"**	1	
CABLE SUPPORT ASSEMBLY KITS:				
100-00021-08 * 5	3″	Coupler with " Cable	1	
		3-Way Cable Adapter	1	
100-00028-08 ** 9	6″	1/4-20 Keps Lock Nut	3	
		Pivoting Cable Glider	3	
ASSEMBLY NUMBER — *43035 (53" CABLE) / **43041 (96" CABLE)				

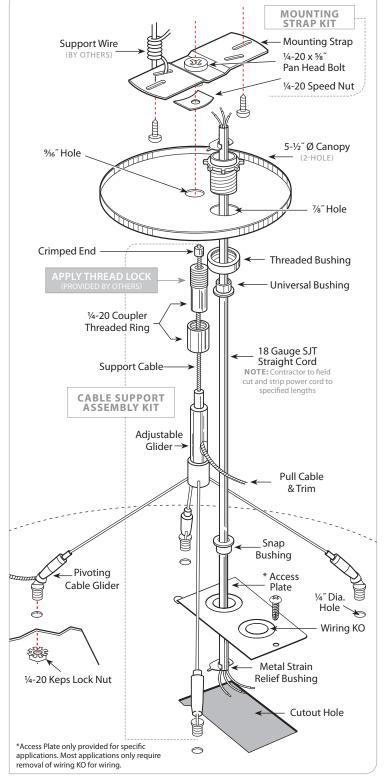

WARNING: Ground fixture in accordance with local and national electrical codes. Failure to do so may result in serious personal injury.



^{*} When D9 is ordered minimum ceiling to fixture is 18'